 


AGPTek Longevity Music Player

A18 User Manual

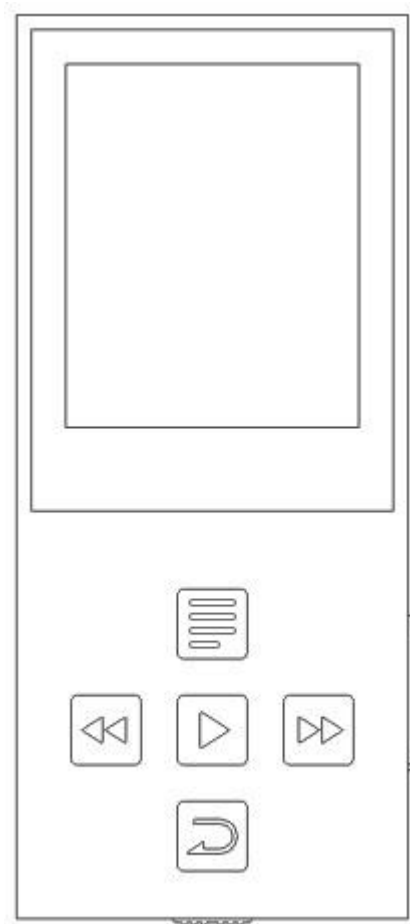

Please contact us via Leo@agptek.com, when anything comes to your mind, we urge to turn this little thing into the best music player in the world and in your hand.

Index

Quick Guide..... 3

Power On and Off..... 4

Charging the Battery..... 4

Transfer Files to Your Player..... 4

Play Your Music..... 5

Play by Bluetooth..... 7

FM Radio..... 8

Recordings..... 9

Folder View..... 10

Tools..... 11


Pictures..... 11

 
E Book..... 11

Support and Troubleshooting..... 12


Quick Guide

Plug earphone into the jack on bottom right of your device then slide the power switch to right to turn the player on.

Each time you tap the button , it will bring you to one of its nine different functions, including Music, Bluetooth, FM Radio, Set, Recordings, Folder view, Tools, Pictures, and EBook.

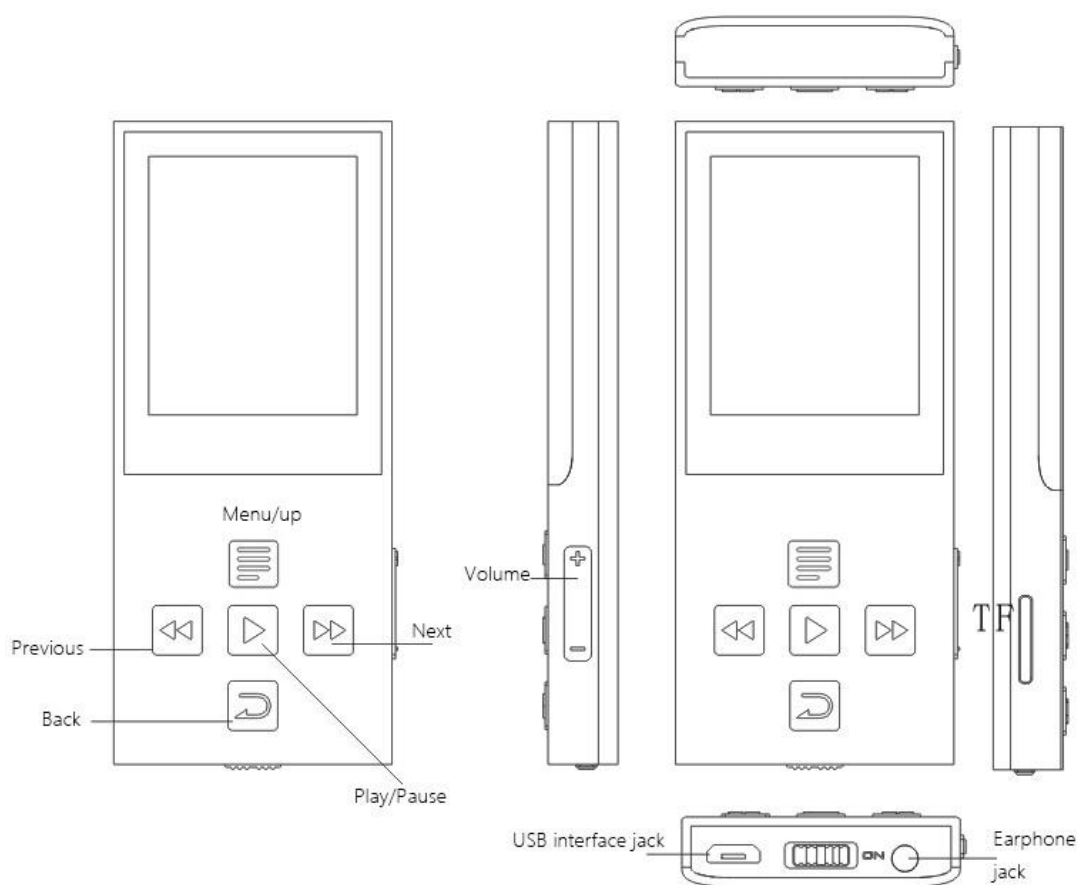

Note: the player will switch to sleep (stand-by) mode if inactive for a few seconds. And you can hold the central button for about 3 seconds to wake up the player.

When it' s on music/FM radio/recording playing interface, tap the button  to back to last grade; in other interface, tap the icon to scroll down.

Power On and Off

Turn the slider switch(Main Power) at the bottom of the player to to right.

1. Standby mode. While the slider switch in ON position, pressing the central button for about 3 seconds to turn off your player. Please kindly note, the device is not really powered off but fallen into standby mode, and the battery will be consumed still. To turn off your player totally, please turn the slider switch(Main Power) at the bottom of the player to to the left.
2. If you have been fallen into standby mode with the slider switch in ON position, you can wake up the unit by pressing the center button for three seconds.

Note: If you cannot switch the player on, please make sure the slider switch is in ON position (right side).

Charging the Battery

1. Plug one end of the provided micro USB cable into the USB port of a computer, plug the other end into the micro USB port on your device. It will start charging automatically.
2. You can also charge the device via chargers. Please kindly note that the chargers should meet standards: input: AC110-240V 50/60Hz Max: 100mA; output: DC5.0-5.5V 500mA-800mA.

Transfer Files to Your Player

1. Connect your device to the computer with the enclosed Micro USB cable the mp3 player will show up as a removable disk as soon as the computer recognize it and then just drag files into the mp3 player. If your computer

cannot recognize the player, the enclosed Micro USB lead may has problem please use another Micro USB lead to connect it to your PC.

2. When your device is showed as a removable disk, you can put the files saved on your computer to your player. When the slider is "off" the unit will power up when connected to a USB port, and then go dead when disconnected. Slide the switch of the opposite position it will power up OK.

Play Your Music

Selecting the Music icon on main screen with central button, and then a related list will show as " All songs" , "Artist" , "Albums" , and "Genres" etc.


Choose and adjust according to your need.





Main

 
1. Return to main screen

When the player is on music playing screen, there are two ways for you to return:

- Press the menu button, a related list will show with the item "Back to Home" , choose it and then you will return to the main screen
- Press the back button to return to the last grade, then tap the button  continually to return to the main screen.

2. Rewind/Forward

- Hold button  to fast rewind, tap to the previous song
- Hold the button  to fast forward, tap to the next song
- Tap the central button to play or pause.

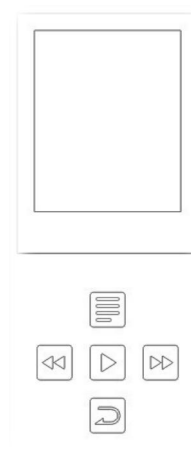

3. Volume Adjustment

Press and hold the button +/- to adjust the volume.

4. Resume Playback

- Resume/Now playing option

When you have back to main screen and start another application, the next time you enter "Music", you will find the item "Resume" or "Now playing" . choose them and then start playing from where you left off.

 
- Resume with power on/off

Press the back button to exist from the main playing screen and hold the central button for three seconds to turn the player into sleep mode, the next time you wake up the player it will start playing from where you left off last time.

5. Submenu

- Shuffle and Repeat

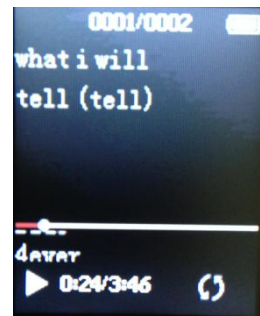


When you are on music playing interface, tap the menu button to access to its submenu, and then choose the item "Shuffle" or "Repeat" according to your need.



Note: if you play the song through "Music" , it will only shuffle/repeat the songs in the folder which your music is included. If you play the song through "Folder" , it will shuffle songs by folder and repeat as you set.

- Add Bookmarks

When accessed to the submenu, choose "Bookmarks" with the option "Add bookmark" from the list that appears.

- 1) Bookmarks are marked by the stopping time as "hh:mm:ss" .
 - 2) Maximum number of bookmarks supported by each audio file is 10. Additional bookmarks will override the ones set previously.
 - 3) To find saved bookmarks, select "go to bookmark" , found under item "Bookmarks" . Select "Delete bookmark" to delete it.
- Language learning
- 1) Choose "Repeat mode" to access to its function, and the icon for A-B indication will appear on playing screen.
 - 2) Starting time for replay is confirmed while tapping the button  (B is flashing).
 - 3) Tap the button  again and then it will start replaying (adjust the replay paragraph according to your need)
 - 4) Tap the button  again to back to normal playing.
- The player will fall into sleep mode as you set in "Sleep timer"
 - Choose "Rock" , "Funk" , "Classical" etc. in "Equalizer" , and you can also custom the effect according to your need.
 - The player will start playing indifferent speed according to your set in "Speed" .
 - Add the music file to playlist in "Add to playlist" .

Play by Bluetooth

Please kindly note turn your BT device on pairing mode before connecting.

Selecting the "Bluetooth" icon on main screen with central button to enter its function. Make sure that the BT device is on pairing mode. (Please kindly note that for some Bluetooth speaker and lots of Bluetooth headphones,



only when the LED flash red and blue at the same time, it is under pairing mode)

- The screen will display as “please wait” > “Searching” > “Bluetooth Connected” . Then play the music files as you want. Note: playlist is not supported under BT mode.
- Please kindly note you can’ t rewind or forward under BT mode, and there is a BT icon on top left corner of the screen.
- If your BT device can’ t be connected with the player, please kindly check under the “Bluetooth device list” , find and choose your BT device and then start connecting.
- If the Bluetooth feature does not work on your player please contact us for help: eva@agptek.com.

FM Radio

Selecting the “FM radio” icon on main screen with central button to enter its function.

- Manual tune and Auto tune

When choose “Manual tune” · tap the button  and  for rewind and forward search one by one, and hold the button for searching automatically, then press the central button to stop.

When choose “Auto tune” , it will start searching automatically, and the searched stations will be saved under “Stations” .

- Set via submenu

While on radio playing screen, press the menu button to access to its submenu. Then a related list will show as “Bluetooth link” , “Save to preset” ,

“Tuner region” etc. Adjust according to your need.

Please kindly that you need to turn your BT device on pairing mode if you choose “Bluetooth link”. Choose “Search” and find your BT name, then tap and connect it with your player. When it’s connected, you can enjoy listening radio via the BT device.

- Start FM recording

Choose the item “Start FM recording”, and then tap the back button to with the option “Yes” to save it.

Tap the item “FM recording” to play the saved recordings you saved.

Recordings



Selecting the “Recordings” icon on main screen with central button to enter its function.




The following functions are displayed: “Start Voice Recording”, “Recordings library”, “Recording Format” and “Record Settings”.

- Select a format from MP3 and WAV
- Select the bitrate according to your need under “Record Settings”
- Select “Track AVR mode” under “Record Settings” and then it will start recording automatically once it’s waked up by the sound
- Scroll to “Start Voice Recording” to start your recording
- To pause or stop recording, press the central button
- To save, press the back button and then select answer yes to save
- To play, go to “Recordings Library” and play as music

Folder View


Selecting the “Folder View” icon on main screen with central button to enter its function.




Tap the button / to choose different items, and play according to your need.

 
- Play the video
 - Tap the central key for Playing/Pause
 - Hold button  to fast rewind, tap to the previous video
 - Hold the button  to fast forward, tap to the next video
 - Back to menu: while in video playing screen, tap the back button and then tap the button  continually to back to the main menu
 - Tap the menu button to enter into its submenu, and then a related list will show as “Brightness” and “Repeat” etc. Adjust according to your need.

*Note: The product only supports 160*128 video, you may convert video files to this format by the tools included in the device.*

- To use the “amvtransform” included in the device

Install the program on your computer first, and then press the icon  to choose the file you want


to convert on your computer, and choose the icon  to put the converted video in the file on your A02 player. Choose the icon  to start convert, the bottom will show the progress of converting for the icon , it will be ok until it showed 100%.

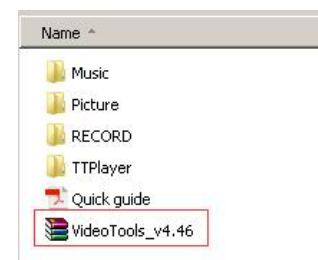

Tools

Selecting the “Tools” icon on main screen with central button to enter its function. The n a related list will show as follows “Calendar” , “Stopwatch” and “Alarm” .

- Calendar

Tap the central button to enter its function. And then tap the button  to choose among year/month/day, tap the menu/ back button to choose different value.

- Stopwatch

Tap the central button to enter its function. There are 5 preset options for you. Tap the central button to enter it.


- Tap the button  to start different items

- Tap the button  to back to last grade

- Alarm

Tap the central button to enter its function. And set the alarm time/cycle/music and volume according to your need.

Pictures

Selecting the “Pictures” icon on main screen with central button to enter its function. Tap the button  to change different picture items.


When it’ s on picture playing interface, tap the menu button to access to its function, and then adjust according to your need.

E Book

 
Please note: Only “txt” format is supported for eBooks.

Selecting the “E Book” icon on main screen with central button to enter its function.

Tap the button  and  to turn the page up/down.

Tap the button  to access to its submenu.

Please note: if you can't read your txt document through E book, connect your player to the computer, and then choose the file for the item “save as”, select the code as “UTF-8” and save. Copy the txt file to E-Book folder and it will back to normal condition for your reading.

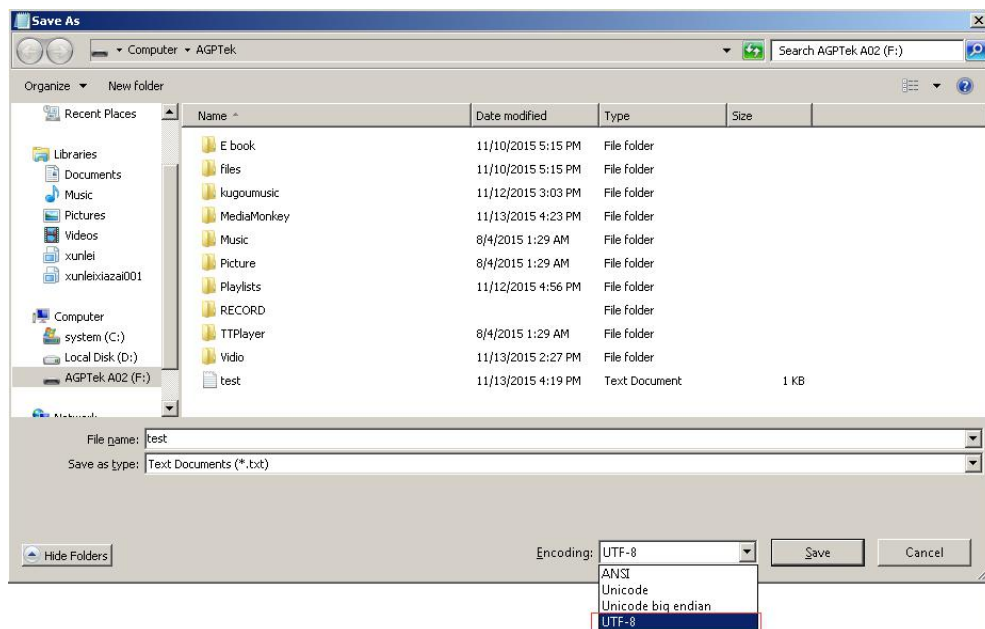

Support and Troubleshooting

 
1. How to use the playlist

- To use the preset playlist.

Press the button and then choose the option “Add to playlist” for the song you want to operate. There are 3 items prepared for you, including “Playlist on the go [1]”, “Playlist on the go [2]” and “Playlist on the go [3]”, you can add the song to any one of these three as you like.

- To create the playlist by yourself

Editing Playlist by media player could be painful, no matter by iPod or others. There is a free program called Media Go. It's the easiest program to use for transferring playlists to the AGPTek. Just create your playlists in Media Go and then right-click its name and select 'Add playlist to X :(Which is your MP3 player's disk) '. (You can download it at <http://mediago.sony.com/enu/>) After sending your playlist and music to the player, you may find it in "Music" .

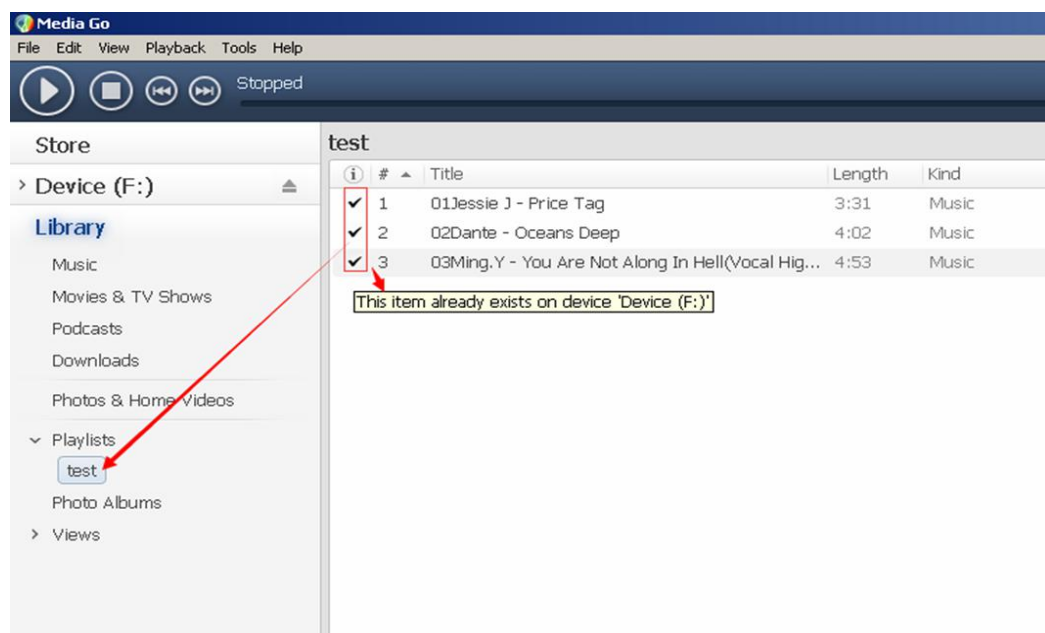

2. If the device is frozen, turn it off and then restart

3. If the device doesn' t turn on

- Turn the slider power switch to off (left).
- Connect the player to your computer.

If the player still can' t be used after charging, please contact with our customer service.

4. Serious Noise

- Dirt will cause noise. Inspect the headset and clean if necessary.

- A damaged music file may cause serious noise. Try another song to test.

5. No sound heard from headset

- Please check whether the voice volume is setting up at 0.
- Please check if there is any problem about the headset connecting.

Specifications

| | |
|------------------|--|
| Weight | 39.5g |
| Material | Plastic |
| Capacity | 8 GB (supports up to 64GB) |
| E book | TXT |
| Video format | WMA (160*128) |
| Picture format | BMP/JPG |
| Music format | MP3 、 WMA 、 APE 、 FLAC 、 OGG |
| Recording format | WAV, MP3 |
| Dimension | 92mm×40mm×11mm |
| Battery | 700 mah lithium-ion rechargeable battery |