


User Manual

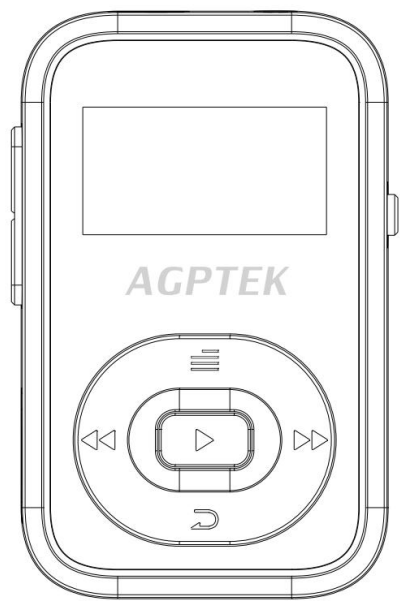

AGPTEK X26 Music Player

Index

Quick Guide.....	1
Basic Operations.....	1
Charge the Player.....	2
Turn the Player ON/OFF.....	2
Music Playing.....	2
Return.....	3
Rewind/Forward.....	3
Volume Adjust.....	3
Submenu.....	3
Bluetooth.....	5
Play music by Bluetooth.....	5
Recordings.....	6
FM radio.....	7
Calendar.....	8
EBook.....	8
Folder view.....	8
Nowplaying.....	9
Settings.....	9
Support and Troubleshooting.....	10
Specifications.....	11


Quick Guide

While the player is powered on, click button ◀ / ▶ to access to its 9 different functions, including "Music", "Recordings", "FM radio", "Calendar", "EBook", "Folder view", "Settings", "NowPlaying" and "Bluetooth", click the central button to enter.

Plug your earphone into the jack to enjoy the music and radio you like.

Note: The player will turn off automatically without operation within 1 minute. Hold the central button for about 3 seconds to power on it again.

Basic Operations

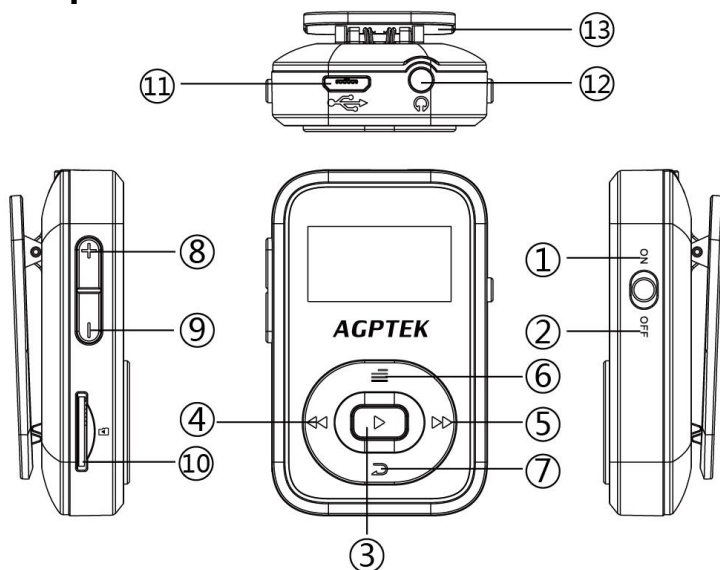

- | | |
|------------------------------|------------------------------------|
| 1. Power On | 2. Power Off |
| 3. Play/pause/Confirm | 4. Previous song/
Rewind/Return |
| 5. Next song/Fast
forward | 6. Menu button/Scroll up |
| 8. Volume up | 7. Back/Scroll down |
| 10. Card slot | 9. Volume down |
| 12. Earphone jack | 11. Micro USB jack |
| | 13. Clip |

Charge the Player

- Charge your player by a micro USB cable. Connect you player with the computer (the display shows "Charge & Transfer" and "Charge & Play" , choose according to your need).
- Charge your player via a charge adaptor (not included in the package). Please kindly note the charge adaptor should be comply with following standards:
 - Input: AC110-240V 50/60Hz Max :100mA
 - Output: DC5.0-5.5V 500mA-800mA

Turn the Player ON/OFF


Turn the slider switch at right side of the player to on/off to power it on/off.

While the slider switch button is on, click

the central button for about 3 seconds to power it on/off.



Note: If you cannot switch the player on, please make sure the slider switch is in ON position.


Music Playing

Click the central button with icon  on main interface to access to its function. And then a related list will show as follows: "All songs" , "Artists" , "Albums" , "Genres" , "Playlists" and "Create playlist" .

Return

- Return to main screen

While on music playing interface, click the button  to exit, and the click the left arrow button  continually to back to the main screen.

While on other interfaces, always click button  to return(not available for Bluetooth function).

Note: When you turn off the player while the music is still playing on backstage, the

next time you turn on it, it will start from where you left off.

Rewind/Forward

Use the button ◀ / ▶ to rewind/forward.

While it' s on music playing interface, click button ◀ / ▶ to go to the previous/next song. Hold button ◀ / ▶ fast for fast rewind/forward.

Volume Adjust

Click the button +/- on the left side to increase/decrease the volume.

Submenu

While it' s on music playing interface, click button ≡ to access to its submenu. The related list will show, including "Playback settings" , "Sound settings" , "Add to playlist" , "Remove from playlist" and "Delete" .

- Playback settings
 - Choose to "Play all" , "Repeat 1" , "Repeat all", "ViewPlaying" and "Shuffle". Adjust according to your need.

Note: the shuffle repeat option only works under the folder that the now playing music is included.

- “Repeat Settings” (only available when the music is playing)

Choose “Replay settings” > “Replay Mode” to access to its function, the icon for A-B will appear on music playing screen. Starting time for replay is confirmed while clicking the icon ► (B is flashing), click the button again and then it will start replaying (adjust the replay paragraph according to your need). Click the button again to back to normal playing.

Choose “Replay settings” > “Replay Times” from 1 to 10;

Choose “Replay settings” > “Replay Gap” from 1 to 10 seconds.

- Sound settings
 - Equalizer. You can choose “Rock” , “Funk” , “Jazz” etc. according to your need.

- Variable speed playback: adjust speed from -8(Slowest) to +8(Fastest). Set the playing speed as you need.

- Add to playlist/remove from playlist

There are 3 preset playlists on this player, including "Playlist on the go [1]" , "Playlist on the go [2]" and "Playlist on the go [3]" .


- Delete the song according to your need.

Note:

1. Lyrics display is supported by the player.


2. Only LRC format is supported and the lyric file should be put in the same folder with the song.

Bluetooth

Click icon  on main interface with the central button to access to its function.

A related list will appear as "BT On/Off" , "Search Device" , "Device List" , "All Music" and "BT Now Playing" .

Play music by Bluetooth

1. Choose to turn on Bluetooth, then click button  to go back to the submenu.

2. Choose "Search Device" to search the Bluetooth around (Please open the Bluetooth function of the device you want to connect at first).


3. All of the devices connected before and being searched now will be listed here. Choose from the devices and click the central button to connect.

4. After successfully connected, you can choose to play the musics in the connected device or the player in "All Music" .


5. Click button « and choose to exit or not.


"BT Now Playing" , go to the music playing interface via Bluetooth.

Recordings




Click icon  on main interface with the central button to access to its function.

A related list will appear as "Start Voice Recording", "Recordings library", "Record Format" and "Record Settings" .


- Scroll to "Start Voice Recording" to start your recording. Click the button  to

select whether to save it or not, then click button  continually to back to main interface.

- To play the recordings you saved, go to "Recordings Library" and then play as music.
- Select a recording format between MP3, ACT and WAV.
- Set the recording bitrate and recording scene according to your need.

When it's on recording playing interface, click the button  to access to its submenu; click the button  to return, click the left arrow button  continually to back to the main screen.

FM radio

Click icon  on main interface with the central button to access to its function. To enjoy the radio, plug your earphone into the player first.

- Manual tune and Auto tune

Manual tune: choose manual tune to adjust

it by yourself. Click the button « / » for rewind and forward search one by one, and hold to search automatically, then click the central button to stop.

Auto tune: choose to search automatically.

- When it's on radio playing interface, click the button ≡ to access to its submenu. Adjust according to your need.


- Start FM recording: choose to start, click the button ➡ to select whether to save it or not, find the recordings you just saved in "FM Recording Library" .

- Save the now playing FM station to preset or clear the preset station. The maxim presets is 30.


- Choose different regions according to your need.

Calendar

Click icon  on main interface with the central button to view the date and time.



Click button  to go back to the main interface.

EBook



Click icon  on main interface with the central button to access to its function.

Please kindly note the player only can recognize the article in "txt." format.


Click the central button to enter;


Click button  /  to turn the page up and down;

While on text playing interface, click the central button to play automatically, click again to back to normal playing;

Click button  and choose Playsetting to set the interval, add or delete ebook/bookmark, click button  to return.


Folder view

Click icon  on main interface with the central button to access to its function.

Scroll up and down to choose different items. When the music is playing, click button  and find "delete" in the


submenu.

Nowplaying

Click central button with icon  on main interface to access to its function. The music/radio playing interface will be shown, and it will resume playing music/radio from where you left.

Note: When there is no music/radio playing in the backstage, Now Playing function will not be available.

Settings

Click central button with icon  on main interface to access to its function. You can set the related items according to your need, for example:

- Set the backlight timer, sleep timer and date and time according to your need.

Note: Click the central button to confirm the change you set.

- Choose the language according to your need.
- See the information of your player.

- Format the player or back to factory settings according to your need.

Note: if you do the "Factory Default" , language selection will appear on the screen for you to choose when you turn it on next time.

Support and Troubleshooting

- Can' t turn on your player
 - Check if the battery has run out
 - Check if the charge adaptor meets the standards
- No sound from your earphone
 - Check if the volume is set for 0
 - Check it' s connected correctly

Specifications

Screen	1.1" OLED
Weight	22.5g
Dimension	54*34*13mm
Flash Memory	8GB
Bluetooth	Compatible with V4.0 or higher

Recording Distance		5-10 meters
Recording Format		MP3/WAV/ACT
USB Port		Micro USB 2.0
Bluetooth Range		8-10 meters without obstacles
Lyric Format		LRC
Playing Time		30 hours music playing with earphones
SD Card Expansion		Up to 64G
Charging Time		About 1.5 hours
Battery		3.7V/240 mAh lithium battery
Audio format	MP3	Bit rate: 8---320kbps, Sampling rate: 8---48KHz
	WMA	Bit rate: 5---384kbps, sampling rate: 8---48KHz

	FLAC	Bit rate:1000-1200kbps (L0-L8), sampling rate:8---48KHz
	APE	Bit rate: 800—1000Kbps (Fast \Normal Compression), Sampling rate:8---48KHz
	AAC	Bit rate:8---320kbps, Sampling rate:8---48KHz
	WAV	Bit rate:32---384kbps, sampling rate: 8KHz---48KHz

Any more problems, please feel free to contact with our customer service at support@agptek.com.