

User Manual

 
A29 Music Player

CONTENTS

English	01/03
Deutsch	04/06
Italiano	07/07
Español	08/10
Français	11/12
日本語	13/14

Thank you for purchasing AGPtek MP3 Player. Please read the manual carefully before using the product. Specifications are subject to change without prior notice.

Buttons and Controls

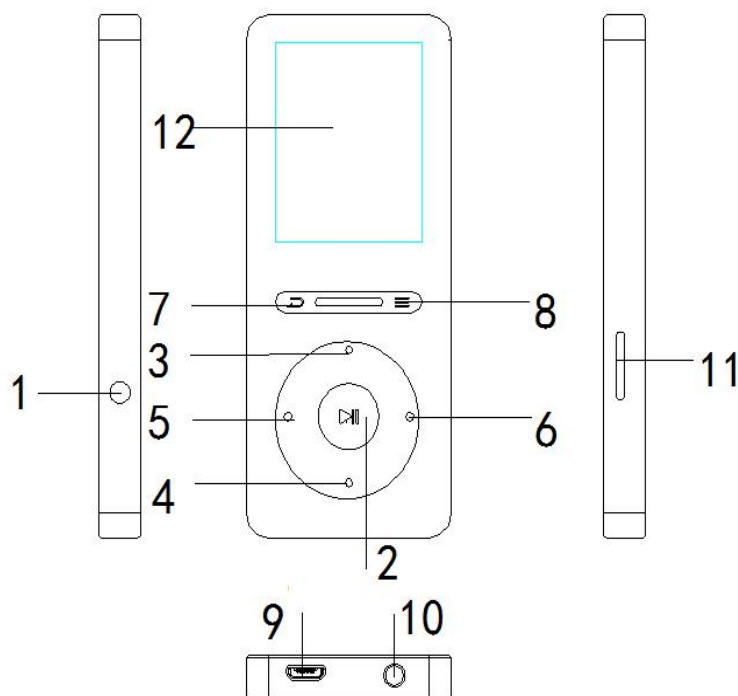

- 1.Power button
- 2.Play/Pause/Enter
- 3.Scroll up/Volume +
- 4.Scroll down/Volume -
- 5.Previous/Rewind
- 6.Next/Fast forward
- 7.Back button
- 8.Menu button
- 9.USB port
- 10.Earphone jack
- 11.Card slot
- 12.Display

Data Transfer

You can transfer music from your computer to the player using the drag-and-drop method or using music management software such as Windows Media Player. You can simply plug it into your computer and copy over media files as if it were a hard drive.

Charge the Player

1. By connecting to a computer with the included USB cable

The USB cable can both be used for data transfer and charging the player.

2. By connecting to a charger(Not included)

Please note: The specifications of the charger must meet the following requirements or any accident or failure happened will be regarded as man-made damage.

Input: AC110-240V 50/60Hz Max:100mA

Output: DC5.0-5.5V 500mA-800mA

Power On/Off

1. Power On: Slide the power switch to "On" position. If the switch is already at "On" position, just press the play button ►|| for 3 seconds.

2. Power Off:

1) Slide the power switch to "Off" position.

2) Press play button ►|| for 3 seconds when the switch is at "On" position.

Note:

1) Please put the power button to "Off" position if you won't use it for a long time.

2) If you cannot switch on the player, please make sure the slider switch is on the right side.

3) When the player is on the music playing interface, if you hold button ►|| to turn off it, next time you switch on the player, it will start from the last position it left off.




Main interface

Each time you press the button ▲/▼/◀◀/▶▶, it will bring you to one of its 9 different functions, including Music, Radio, Folder, Setting, Record, Tools, Pictures, EBook and Video.

While it's on the main interface, press button ►|| to

enter.

Play Music

Find "Music" on main menu, click button  to access to its function. Click button  to choose from the songs, click button  to play.



- All songs — play by name sequence
- Nowplaying — take you back to the song or audio file that you are playing now.
- (Resume) — Choose "Resume" to start playing from where you left off last time.
- Artists — Displays Tracks sorted by Artist
- Albums — Displays all Tracks sorted by Album
- Genres — Displays all Tracks sorted by Genre
- Playlists — 3 playlists
- Update card data — Update local and card folder
- Local folder — Internal memory
- Card folder — External Micro SD memory card

Volume Adjustment

When it's on music playing interface, press  to increase/decrease the volume.

Fast Rewind/ Forward


When it's on music playing interface:

- Hold button  for fast backward/forward. Click to go to previous/next song;
- Click button  to play or pause.

Return

In any interfaces, click button  to back to the previous menu; hold to back to main interface.

Submenu

While it's on music playing interface, press the button  to access to the submenu.

Then a related list will show, including:

"Home", go back to main interface.

"Repeat", choose to repeat 1, repeat all, and view playing or turn off repeat function.

"Shuffle", choose to turn on/off shuffle mode.

"Play from...", choose to play songs from all songs/artist/album/genre.



 

Please note: you can also find "Repeat"/"Shuffle"/"Play from..." in "Setting">"Play mode", whether you make changes in "submenu" or "settings", the setting will work in Music, but not in video.

"Equalizer", choose from the 7 sound effects, or choose "off" to turn off equalizer

Please note: you can also find "Equalizer" in "Setting">"Sound settings", whether you make changes in "submenu" under Music or "settings", the setting will both work.

"Speed", adjust speed from -8(Slowest) to +8(Fastest).

"Language learning"(only available when the music is playing),

- 1) Choose the option "A-B Repeat", click button  to confirm the starting time A(A is flashing).
- 2) Then click button  again to set the ending time B(B is flashing). Click button  again and the audio from time A to B will be repeated automatically. The icon for A-B indication will appear on the screen.
- 3) Click button  again to back to normal playback.

Replay Times, choose to replay passage A-B for 1-10 times.

Replay Interval, choose to set the playing intervals for 1-10 seconds.

 
"Sleep timer", choose "Off" to turn off timer, or choose to set the sleep timer in 1-99 minutes.

"Bookmarks", choose to add, delete or go to bookmark.

 
"Delete", choose to delete the song that is playing now.

"Add to playlist"/"Remove from Playlist", choose to add to or remove from the 3 playlists.

- To shuffle your music

You can shuffle your songs from the music playing screen by pressing the button  > "Shuffle", and you can also Shuffle by pressing "Setting" > "Play mode" > "Shuffle".



- To repeat your songs

You can repeat your songs from the music playing screen by pressing the button  > "Repeat", and you can also repeat by pressing "Setting" > "Play mode" > "Repeat".

The player would only play the first 10 seconds of a track and then skip if you select option "View playing" under "Repeat".

Please note: if you play songs through "Music", it will only repeat in the folder which your songs is included.

Video

Find "Video" on main menu, click button  to access to its function. You will need to choose from local folder or card folder if the card is inserted. In the video list, click button  to go to its submenu:

"Home", go back to main interface.

"Repeat", choose to repeat 1, repeat all or turn off repeat

function.

"Delete video", choose to delete the video.

"Update Card Data", update the videos in the card.

● Fast Rewind/Forward

When it's on video playing interface:

- Press ▲/▼ to increase/decrease the volume.
- Hold the button ⏮/⏭ for fast backward/forward. Click to the previous/next video;
- Click button ▶⏸ to play or pause.
- Click button ⏮ to back to the previous menu; hold to back to main interface.

*Please note: This player can only support the .amv format in 160*128, you should convert video files by format conversion software first.*

Radio

Select "Radio" on main menu, click button ▶⏸ to access to its function. A related list will show including "Station list", "Manual tune", "Auto tune" and "FM recording". Click ▲/▼ to select.

• Manual tune and Auto tune

You can adjust the radio by "Manual tune" or "Auto tune", Choose "Manual tune", click button ⏮/ ⏭ to rewind or forward search one by one, and hold button ⏮/ ⏭ to search automatically, press the button ▶⏸ to stop.

Choose "Auto tune" to search and save the radio stations automatically.

• Set the FM radio with the button ≡

While on radio playing screen, press button ≡ to go to its submenu, including "Start FM radio recording", "Save",

"Clear preset", "Auto tune", "Tuner region" and "FM recording".

- Choose the item "Home" to main interface(You can also press ➤ continually or hold button ➤ to back to the main interface.)

- Choose "Previous menu" to back to the last menu.

- Choose "Start FM radio recording" to save the radio you want to record, find the saved recordings in the "FM recording".

Please note:

1. You can only listen to mono radio station on this player.

2. The saved recordings can be saved in WAV (in default) /MP3/ACT format, choose to set the format in "Record" > "Record Settings">"Record Format".

3. You can choose to store your radio in local folder or card folder under "FM recording" when the card is inserted.

Pictures

- Click ▶|| to enter and choose to play photos from local folder or card folder;

- Click ◀◀/▶▶ to go to the previous/next picture.




Record


Select "Record" on main interface, click button ▶|| to access to its function, then a related list will show as "Start Voice Recording", "Recordings library", "Storage"(only available with card inserted) and "Record Settings".

- Select "Start Voice Recording" and click ▶|| to start your recording. Click ➤ and then choose "Yes" to save your recording;

- When it's on recording interface, click the button ▶|| to

pause or start;

- See your recording files in Recordings library. Click button  to play the recordings. Click / to go to the previous/next recording.

- Storage (only available when an expandable card is inserted), choose to store your recordings in internal or external memory. Confirm your selection with button .

● Record Settings

"Record Format", Select a format among MP3, WAV and ACT;




"Set rec bitrate", Select from 512/768/1024/1536kbps for WAV format; 32/64/128/192 kbps for MP3 format; 8 kbps for ACT format;

"Track AVR mode": Choose Normal/AVR mode;


Note: When it is in AVR mode and you choose to start recording, the player will not record until sound is detected and stop recording when no sound detected.

"Set recording scene", choose from different scenes.

Folder

Select "Folder" on main menu, click button  to access to its function. All of the files in the player will be listed. If the Micro SD card is inserted, you can choose to go to Local folder or Card folder. Click / to select and choose to play.

Tools

Select "Tools" on main interface, click button  to access to its function. A related list will show "Calendar", "Stopwatch" and "Alarm".

Select Stopwatch and click button  to enter, click

▶|| again to start the timer, then click ▶|| again to stop/resume. Press ▼ to start a new one. Click ↶ to go back.

Please note: the maximum Stopwatch list is 5.

Select Alarm and click button ▶|| to enter, set the alarm switch/time/cycle/music/volume you want.

EBook

Please note: Only "txt" format is supported for eBooks.

- Select "EBook " on main interface, click button ▶|| to access to its function.

- Press button ▲/▼ to turn the page up/down.

- While on text playing interface, click button ▶|| to play automatically, click again to stop(click ≡ and choose Playsetting to set the automatic playing interval).

Please note: if your player cannot read your txt document through E book, connect it to the computer, and then choose the file for the item "save as", select the code as "UTF-8" and save, then copy the txt file to E-Book folder.






Settings

Find "Setting" on main menu, click button ▶|| to access to its function. Click ▲/▼ to select. Click ↶ to back to the previous menu; hold ↶ to back to main interface.

The related list will show as below:

- Play mode: Choose to "Play music from"/"Repeat"/"Shuffle" the songs in "Music".
- Sound settings: Set the equalizer;
- Power off: Shut off automatically when reaches the set time;
- Sleep timer: Choose "Shut down sleep timer" to turn off

this function or set the sleep timer between 1-99(minutes), when it reaches the sleep time you set, the player will power off automatically;

- Display settings: Set the Brightness, Backlight timer and Screensaver of your player;
Backlight timer: set the time at 10(seconds)/20(seconds)/ 30 (seconds)/Always on.
- Date and time: Set the Date and time according to your need; Click button  /  to select year/month/day/ hour/minute. Click / to set the year/month/day/hour/minute. Click button  to save your settings.
- Language: Choose your language;
- Information: See Player information/Disk space/Supported file type about your player;
- Format device/Factory settings: Format the device or restore to factory setting.

Trouble Shooting

Restart the player if it crashed or doesn't work.

a.Can't turn on the player

Please check whether the player is run out of battery, connect the player to a adapter and try again after charging.

b. Heavy noise when playing music

Please make sure the plug is clean or this may cause noises;

Please check if the music file is damaged. Try to play other musics to confirm. Damaged files may lead to

heavy noise or skipping;

c. Can't hear any sound from the player

Please check if the volume is set to 0;

Please check if the earphone is in poor contact with the player.

Specifications

Screen	1.8" TFT screen			
Weight	45g			
Dimension	90*40*11mm			
Flash memory	8G			
Audio format	MP3/WAV/APE/WMA/FLAC etc.			
Video format	128*160 AMV(converted video)			
Recording format	MP3/WAV/ACT			
Recording distance	5-8 meters			
Playing time	Music	55 hours	Video	16 hours
Battery	3.7V/460 mAh			
Charging time	1.5-2 hours			
SD card expansion	Up to 64G			

If you have any questions about this product, please feel free to contact support@agptek.com.