 



Quick Guide

- Plug earphone into the jack on the bottom right of your device, then hold the power button for about 3 seconds to turn on/off the player.
- Each time you tap the button ⏮ / ⏭ , it will bring you to one of its 6 different functions, including Music, Recordings, FM Radio, EBook, Folder view, and Set.
- Tap the icon on bottom of the player to access to its function.
- When the screen is off, hold the round button(button ⑦) to stop playing music directly.

Note: the player will power off automatically if inactive and no applications operate on backstage for 1 min.

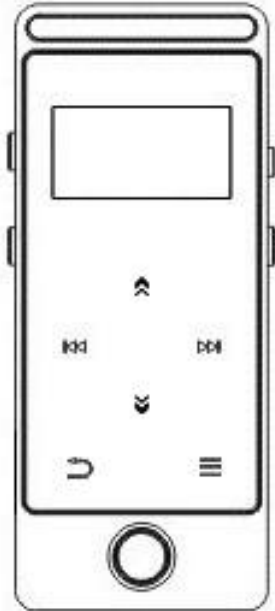

 Parts and Controls

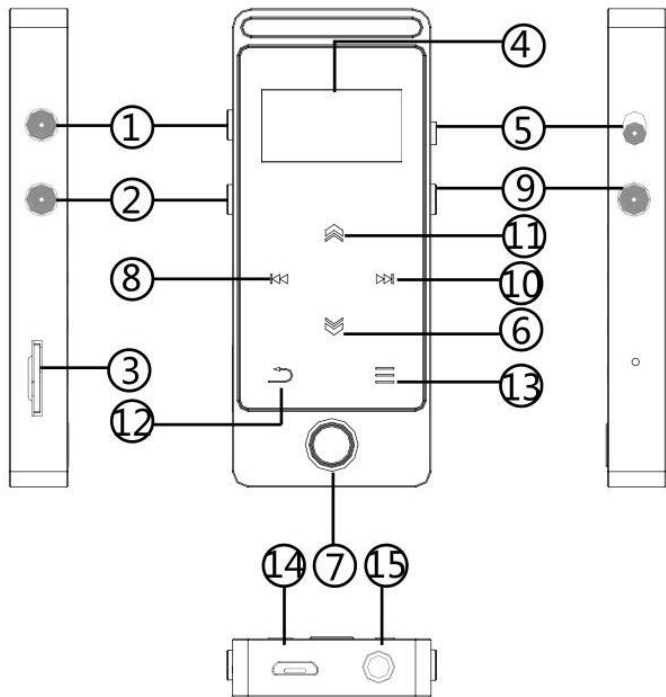

- 1.VOL + button
- 2.VOL - button
- 3.TF card slot
4. Display screen
- 5.Lock/unlock button
6. Scroll down
- 7.Enter/play/pause button
- 8.Tap for previous song
9. Power on/off button
- 10.Tap for next song
- 11.Scroll up
- 12.Back button
- 13.M button
- 14.Micro USB jack
- 15.Headphone jack

Charge the Player

This device has two charge options:

1. Charge the player by a 5V 500mA USB wall adapter(not included);
2. Charge by computer: Plug one end of the micro USB cable into the USB port of a computer, the other end to the port on your device. While it is fully charged, disconnect the cable from your device by pulling it straight outward.

Note: when you start charging, it will show two options: "Charge & Transfer" and "Charge & Play". An icon in the top right corner will show the charging status.

Basic operation

- Screen saving

Tap the power button (right side), and the screen will turn black, which means it falls into screen saving mode. You can also set it in "Display Settings" under "Set".

- Lock the player

Tap the button on right side to lock the player and tap it again to unlock it.

- **Reset hole**

Insert the pin to the pin hole and then you can reset the device.

Play Your Music

While there is "Music" icon on main screen, tap the enter button to access to its function. Then you can play your music files as "All songs", "Artists", and "Albums".

Shortcut buttons:

Play/Pause: When there is music playing in the backend and the screen is off, you can hold button ⑦ for 2 seconds to play/pause the music in any interface.(not available when the screen is locked)

Go to previous/next song: When there is music playing in the backend and the screen is off, you can hold the button①/② for 2 seconds to go to previous/next song.(not available when the screen is locked)

- Return

1. Return to the main screen: tap the return button continually to back to the main screen
2. Return to music playing screen: tap the enter button with icon "Now playing" on main interface to access to now playing interface.

- Rewind/Forward

While it's on music playing interface, hold button » to fast forward, tap to next music file; hold the button « to rewind, tap to the previous song files.

Tap the power button for playing/pause.

- Submenu

While it's on music playing interface, tap the button "M" to access to the submenu. Then a related list will show, including "Home", "Play mode", "Sound settings", "Bookmark", "Repeat settings", "Delete", "Add to playlist" and "Delete from playlist".

1. Play mode

Tap as button M > "Play mode" > "Repeat"/"Shuffle". Select according to

your need.

2. Sound settings

Tap as button M> "Sound settings" >"Equalizer"/ "Variable Speed Playing".


For equalizer, you can choose different music style, such as "Rock", "Funk" and etc.


For variable speed playing, you can set the playing speed as you need.

3. Repeat settings

Tap as button M> ""Repeat settings" > "Replay Mode" to access to its function, and the icon for A-B indication will appear on playing screen.

① Starting time for replay is confirmed while tapping the icon  (B is flashing)

② Tap the icon  again and then it will start replaying (adjust the replay paragraph according to your need).

③ Tap the icon  again to back to normal playing.

Tap "Replay settings" > "Replay Times" from 1 to 10.

Tap "Replay settings" > "Replay Interval" from 1 to 10 seconds

4. Delete

Delete the music files you need.

- Resume playing

While the music is still playing in the backstage, and then power off the player, it will start playing from where you left the next time you turn it on.

- Transfer Files to Your Player

Connect your device to the computer with the enclosed Micro USB cable. The mp3 player will show up as a removable disk as soon as the computer recognize it and then just drag files into the mp3 player. If your computer cannot recognize the player, the enclosed Micro USB lead may has problem please use another Micro USB lead to connect it to your PC.

Note: for lyrics to be synchronous displayed with the playing music, please download the lyric files first. (Lyric format: LRC), and please put the lyric file and the music file in the same folder.

Recordings






While there is "Recordings" icon on main screen, tap the enter button to access to its function. Then a related list will show as "Start Voice Recording", "Recordings library" and 'Record Settings".

- Select a format from MP3, or PCM.
- Scroll to "Start Voice Recording" to start your recording.
- Select a record bitrate among 32 kbps, 64 kbps, 128 kbps and 192 kbps.
- Set recording sensitivity, which means the higher grade you set, the louder sound it plays.
- Go to "Recordings Library" to play the recording files you saved.

FM Radio

- While there is "FM radio" icon on main screen, tap the enter button to access to the radio playing interface.



While on radio playing interface

1. Tap the icon  /  to choose among the preset stations.
2. Tap the button  /  to adjust the station manually; hold it to adjust automatically and then tap other icon to ensure it.
3. Tap the button  to back to last grade.
 - While on radio playing interface, tap the icon M to access to its submenu, and then a related list will show on the screen.
 1. Save the now playing station to presets or clear the preset as you need. (There are 30 presets prepared for you.)
 2. Select the region according to your need.

E Book

 
While there is "EBOOK" icon on main screen, tap the enter button to access to its function.

Please note: Only "txt" format is supported for eBooks.

- Tap the button  /  to turn page up and down.
- Tap the button M to access to its submenu. And then adjust according to your need.

- Hold the enter button until the icon appears on screen, and then it will turn the page automatically.

Please note: if you can't read your txt document through E book, connect your player to the computer, and then choose the file for the item "save as", select the code as "UTF-8" and save. Copy the txt file to E-Book folder and it will back to normal condition for your reading.

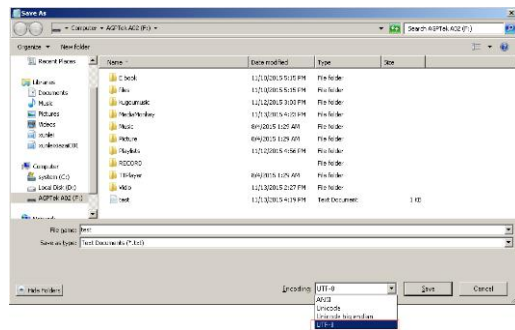

Set

- Set the sleep time and display settings according to your need. Tap the enter button to save.
- Set the date and time according to your need. Tap the enter button to save.
- Choose your language.
- Format the device or do factory setting according to your need.

Specifications

Music formats	MP3, WMA, DRM WMA, OGG, APE (Normal / Fast), FLAC, WAV, AAC-LC, ACELP
Screen	OLED screen
Size	77*34*10 mm; net weight: 53.4g
Capacity	8 GB; supports up to 64 GB (SD card not included)
Playing time	25-28 hours by earphone at 15(medium volume); 14hours by earphone at 30(maximum volume)
Charging time	2 hours
Battery capacity	3.7V/280 mAh
Recording distance	10-15 meters
Lyric format	LRC