


# R2S USER MANUAL

## Overview

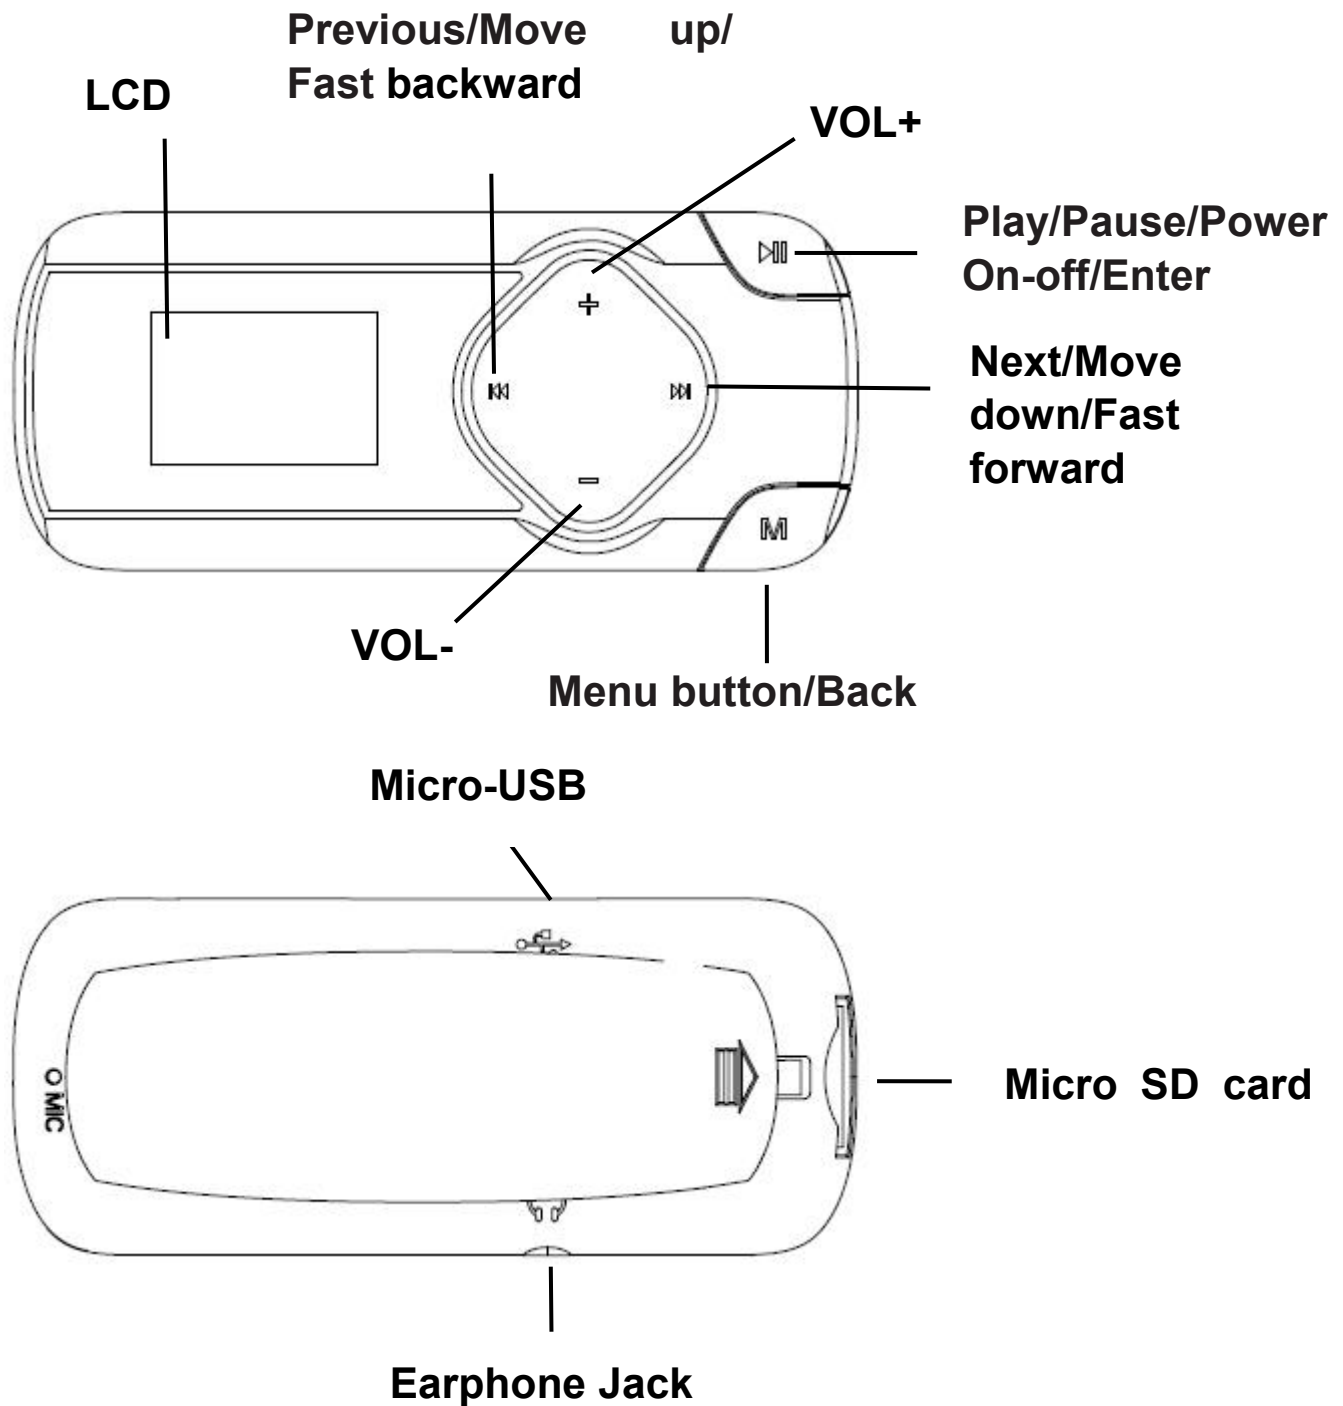

## Technical Specification

### Packaging contents:

.The player

.USB cable  
.User manual

## Specification


Screen	0.8 inch 128*64 LCD display
Audio format	MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/A CELP
Recording format	FM/MIC record and WAV
Battery	Li-polymer rechargeable 140mAh
FM frequency	87.0-108MHZ
Micro-SD card	Extend to 64GB
Micro-USB transfer	High speed USB 2.0

## Basic Operation

### Power on and off

- Hold button  for 3 seconds to turn on/off the player.

### Lock keys

- Press both **M** and  buttons at the same time to lock the screen.  
Repeat to unlock.





### Battery Charging


When the battery indicator on the screen, you must charge the device.  
The device has two charge options:






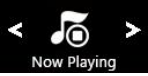
- a) You can charge the device via the USB connector.
- b) You can also charge the device via a 5V 500mAh USB wall adapter (not supplied)

**Note:** The charging time should not exceed 4 hours. It is recommended to turn off the device before charging.

## Main Menu

Hold button  to turn on the player, click  or  to go to the following menu, press  to enter.

ICON	Main menu	Access to function
	MUSIC	Listen to songs saved in SD card






	RECORD	Record voice by the internal microphone and playing recording files
	FM RADIO	Listen to FM radio broadcast
	FOLDER	Navigation by folders
	SETTING	Change the system configuration
	EBOOK	Read Ebook(only for TXT format)
	Now Playing	Playing music or FM radio when it is working on backstage.


## MUSIC

### Loading music

1. The player DO NOT has internal memory. Before using this player, please prepare a Micro SD card with music files at first. Then connect the digital audio player to a computer via a USB cable.
2. Once connected, the unit will show up on the connected computer as if it were a connected USB thumb drive, external hard drive, or memory card.
3. Drag and drop the desired audio files into the unit's drive location on the connected computer.
4. After the files are loaded onto the unit, right-click on the drive and eject it from the computer, then disconnect the USB cable.

### Play your music

Find  icon, press  to enter, click / to choose: "All songs", "Artists", "Albums", "Genres", "Playlists" and "Update the card data", "Play music from". Press  to confirm your option and start to play your music.

When the device is playing songs, long press **M** button to enter its sub-menus, and press  to enter the option you want.

#### ● Play mode

##### 1. Repeat

Here appears 4 options, Repeat off, Repeat 1, and Repeat All and view playing.

## 2. Shuffle

Choose on/off mode as you want.

## 3. Language learning

Here appears 3 options, Repeat mode, Relay times and Relay Interval.

Press ► to enter the option you want

### ● Equalizer

Here are 7 equalizers for your option, Rock, Funk, Hip Hop, Jazz, Classical, Techno and custom.

### ● Add to playlist

There are 3 options prepared for you, including “Playlist on the go [1]”, “Playlist on the go [2]” and “Playlist on the go [3]”, you can add the song which is playing to any one of these three as you like.

### ● Remove from playlist

You can remove the song which is playing to any one of these three Playlist as you like.

## **To create playlists by yourself**

There is a free program called Media Go. It's the easiest program to use for transferring playlists to the AGPTek. . Just create your playlists in Media Go and then right-click its name and select 'Add playlist to X:( Which is your MP3 player's disk) '. (You can download it at <http://mediago.sony.com/chs/download>).

**Note:** whenever at any interface, short press **M** to exit and back to superior menu.

### ● Delete

It will show” ...(song name)” delete? Press ► to choose yes to delete this song.

### ● Sleep timer

When playing time is reach sleep timer you set, the player will power off automatically.


### ● Bookmarks

It is marked by the stopping time as “hh:mm:ss”. So you can set the stopping time before you add it for continues playing next time conveniently.

Maximum number of bookmarks supported by each audio file is 10. You can also cover the previous bookmark with new bookmark, and then the old one will be replaced by the new.


You can find the bookmarks you saved with the option “Go to bookmark” under item “Bookmarks”, and you can delete them with the option “Delete bookmark”.

## RECORDINGS

Find the icon  and press **▶** to enter voice recording. The following list will show: Start Voice Recording, Recordings library, Storage, Record Format and Record Settings.

- Select a format from MP3 and WAV
- Choose “Start Voice Recording” and click button **▶** to start your recording
- Click button **▶** to pause or stop recording, click button **M** and choose “YES” to save the recording.
- Find the recordings under “Recordings Library” and play as music.

## FM RADIO

Find the icon  and press **▶** to enter radio mode. then a related list will show including “Station list”, “Manual tune”, “Auto tune” and “FM recording library”.

### ● Station list

The frequency points of radio station are displayed with 30 frequency points reserved at most.

### ● Manual tune

Press **▶** to enter manual search mode, you can search programs manually through pressing **◀/▶** button.

### ● Auto tune

Press **▶** to enter Auto tune mode, it will show “Do you want to auto-tune”, press **▶** to confirm Yes or No. If choose Yes, it will be searching automatically and automatically save searched station in “Station list”.



### ● FM recording library

When listening to the broadcast station program, long press **M** button to go to its sub-menu, including Home, Start FM radio recording, Clear

preset, Auto tune and Tuner Region.




**Note:** the player is defaulted with command band, if you are in Japan, you need to change to Japan Band.

## FOLDER



Find the  icon and press  to enter folder menu. Here you can check files you have stored on the device.

When you play music under “Folder”, it will shuffle songs by folder if you turn shuffle on under “play mode”.

## EBook

Find the  icon and press  to enter. Here you can find all of the ebooks you have stored on the device. Select and press  to read the ebook.

## SETTING

Find the  icon and press  to access the following settings: “Language”, “Backlight timer”, “Date and time”, “Power off”, “Sleep timer”, “Key tone”, “Format device”, “Factory settings”, “Information”.

- When playing time is reach sleep timer you set, the player will power off automatically
- Choose the language according to your need
- See information about your player under “Information”
- Set the backlight time of your player
- Format the device or restore to factory setting

If you have any question on this player, please contact with [support@agptek.com](mailto:support@agptek.com).