

# User Manual

## R1SB Music Player

## About the manuals

This User Manual only describes the basic operating instructions. For detailed information and operating instructions, you can access to the online Help Guide (Full version) using various devices from [www.agptek.com](http://www.agptek.com).

## About the Operating System


Make sure that the OS is  
Windows98/ME/2K/XP/SP2/Vista/Linux6.2/Mac OS 10.3.

## Charge the Player


1. Use 5V/500mA charger (Not included)
  2. By connecting to a computer with the included USB cable
- The battery for your player is recharged while the player is connected to a running computer.
- Note: If you charge your player when it has not been used for a long period of time, your computer may not recognize it, or nothing may appear on the display. Charge the player for about 10 minutes, after which it should start operating normally again.
- If the display of the player remains blank for more than 10 minutes, disconnect the player and press the RESET button to reset the player.
- If you turn on the computer, restart the computer, shut down the computer, or wake up the computer from Sleep or Hibernate status while your player is connected to the computer, the player may malfunction. In this case, disconnect the player and press the RESET button of the player with a pen or paper clip to reset it. Disconnect the player from the computer before performing these operations.
- To prevent battery deterioration, charge the battery at least once every half a year or every year.

## Parts and Controls

### Front

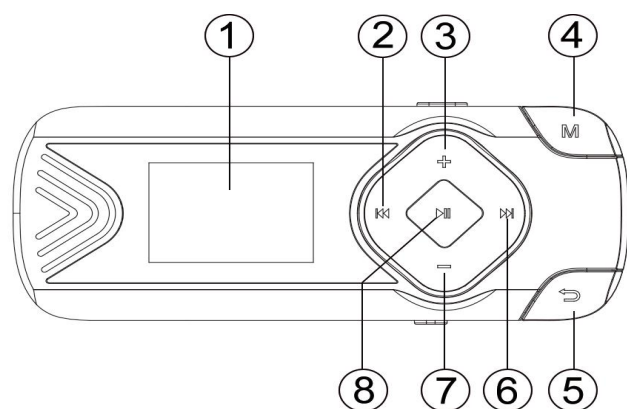

### Rear

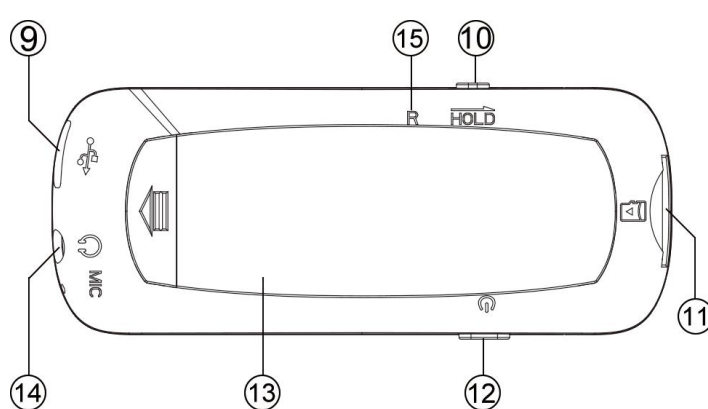 

### 1. Display

#### 2/6. ⏮ / ⏭ button 【Previous/Next/Scroll up/Scroll down】

Press to select a menu item, start fast-rewinds/forwards during playback, or preset an FM station.

#### 3/7. VOL +/- buttons

Click volume button +/- to increase/decrease the volume.

#### 4. M button 【Menu】

#### 5. ↶ BACK/Home button

Always click button ↶ to go back or press and hold to go to home menu.

#### 8. ▶ Play/Enter/Pause button

Executes the desired items. Starts/pauses music playback, or pauses/restarts recording.

#### 9. USB port

#### 10. Lock/Unlock(Slider switch)

Slide to the right side to lock your player. Repeat to unlock. This will disable the operation buttons to avoid accidental operation while carrying your player.

#### 11. Micro SD card slot

#### 12. ⏻ Power button/Screen on/Screen off

Press and hold the power button ⏻ for 3 seconds to turn it on/off.

Click to turn on/off the screen.

### 13. Clip

### 14. Headphone jack


### 15. RESET button

Press the RESET button with a pen or paper clip, etc. to reset your player. While your player is connected to the computer via USB, you cannot reset the player.

## How to Use Your player

The Home menu is the starting point of each application.




Press either side of the   button to select an item, and then press the play button to confirm.

Always click button  to go back or press and hold to go to home menu.


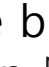

## Home menu

Music, Bluetooth, FM radio, Recordings, Set, Folder View, Now playing (Last played)

### Music

When there is a  icon in the Home menu, click the middle button to access to its function. The related list will show, including: **All songs**, Now playing (Last played), **Artists**, **Albums**, **Genres**, **Playlists**, **Create Playlists**. Choose from the menu, and click the button  to play the music. Click button  to return.

### Rewind/Forward

While it's on music playing interface, hold the button  to fast forward, short press to next music file; hold the button  to rewind, short press to the previous song files. Click button  to play/pause.


### Submenu



While it's on music playing interface, click button M to access to the submenu.

The related list will show, including "Back to Home" , "Shuffle" , "Repeat" "Equalizer" , "Variable Speed Playback" , "Repeat settings",


“Bookmarks” ,, “Delete” , “Add to playlist” , “Remove from playlist” and “Play music from...” .

1. Repeat settings(only available when the music is playing)

Repeat Mode(A-B):choose Repeat Mode, click button  to confirm the starting time A when A is flashing.

Then click the  button to set the ending time B when B is flashing. Click button  again, the icon for A-B indication will appear on the screen and the passage from time A to B will be repeated automatically.

## Bluetooth


Find  on Home menu with the button  to access to its function.

Note: Please open the Bluetooth of the device you want to connect with the player at first.

Bluetooth switch control, choose to enable or disable Bluetooth.

Search for device, choose to search the nearby devices with its Bluetooth opened;

Device List, choose from the available devices and select to connect/disconnect.



When the Bluetooth is enabled, choose “Search for device” to search the nearby devices, then all of the devices which has opened its Bluetooth will be listed. Select the device you want to connect, then click  to connect. After successfully connected, this player is ready to play music or FM radio by Bluetooth earphones, Bluetooth speaker etc.

## FM radio

Find  on Home menu with the button  to access to its function.

Insert the earphone, then select FM frequency from 87.0 to 108.0MHz.

While in the FM radio interface, click button M to enter its submenu: Start FM radio recording, Save to preset, Clear preset, Auto tune, FM recording.



Tune to the radio station you want. Choose **Start FM radio recording** to start recording the radio. Click button  to pause/resume. Click  and choose yes to save the recording and it will back to the FM radio interface automatically.


Find the radio recordings in FM radio > FM recording.


## Note:

- 1.You can not Start FM radio recording under Bluetooth mode
- 2.The radio recordings will also be saved in Recording > Recordings library.


## Recordings

When there is a  icon in the Home menu, click button  to access to its function. The related list will show, including: Start voice recording, Recordings library, Record format, Record Settings.

-Choose Start voice recording and click button  to start voice recording, click again to pause/resume.

-Click the M button and choose yes to save the recording with button .

-Find the saved recordings in Recordings > Recordings library.

Click the button  to select from all the recording files you have saved.

Then click button  to play the recording files you saved.

Record format, choose the record format and bit rate.

Choose from Normal/AVR mode.



Note: When you start recording under AVR mode, the recorder will start recording automatically if sound is detected and stop recording when no sound detected.

## Nowplaying(Last played)

The player displays Nowplaying when there is music/FM radio is paused at background.

The player displays Nowplaying when there is music/FM radio playing at background.

## Set

When there is a  icon in the Home menu, click button  to access to its function. The related list will show, including: Language, Brightness, Backlight timer, Date and time, Sleep timer, Screensaver, Format device, Factory settings, Information.

**Note:** when you set "date and time" , choose to set date, use button

⏮/⏭ to switch to next one, increase or decrease with button +/-, press button ⏸ to save. Set time under "Time setting " and adjust the time in the same way.

## Folder View

Find  on Home menu with button ⏸ to access to its function.

Click button ⏮/⏭ to choose from the different folders/files. Click button ⏸ to play/view. Click button M to access to the submenu.

*Note: Always put the lyric file and the music file in the same folder.*

## Importing and Transferring Music

You can transfer music (WMA or MP3 codec) into [MUSIC] folder on your player by dragging and dropping it in Windows Explorer on your computer. Note: Do not disconnect your player while files are being transferred. If you do, the file being transferred will be damaged.

You cannot transfer music with copyright protection since your player does not support it.

## Help and Troubleshooting

### ● Can't turn on the player

- Please check whether the player is run out of battery, connect the player to a adapter and try again after charging.

### ● Can't hear any sound from the player

- Please check if the volume is set to 0;
- Please check if the earphone is in poor contact with the player.

### ● Heavy noise when playing music

- Please make sure the plug is clean or this may cause noises;
- Please check if the music file is damaged. Try to play other musics to confirm. Damaged files may lead to heavy noise or skipping.

### ● Can't download file from computer

- Please confirm whether it's connected properly;
- Please check whether the storage space of the internal memory is full;
- Please check whether the USB cable is damaged.

● I cannot charge the battery.

- Disconnect the player, and then reconnect it.
- Charge the battery is in an ambient temperature in the range of 5 °C (41 °F) to 35 °C (95 °F).
- Turn on the computer.
- Release the computer from Sleep or Hibernation status.

● **[Connecting USB] does not appear when your player is connected to the computer.**

- Disconnect the player, and then reconnect it.
- Disconnect your player, wait a few minutes, and reconnect it. If the problem persists, disconnect the player, restart the computer, and then reconnect the player.
- Connect your player to another USB connector on your computer.
- If you charge your player when it has not been used for a long period of time, your computer may not recognize it or nothing may appear on the display. Charge the player for about 10 minutes, after which it should start operating normally again.

● **Your player becomes unstable while it is connected to the computer.**

If your player does not function as expected, try the following steps to resolve the issue.

1. Connect your player to your computer to charge the battery.

You may be able to resolve some issues by charging the battery.

2. Press the RESET button with a pen or paper clip, etc.

Before resetting your player, disconnect your player from your computer and check that no song is being played back. You can then reset the player safely. After resetting the player, hold the power button to turn on the player.

If the approaches listed above fail to resolve the issue, please contact [support@agptek.com](mailto:support@agptek.com).



## **About the headphones**

Avoid playing the unit at so loud a volume that extended play might affect your hearing.

At a high volume outside sounds may become inaudible. Avoid listening to the unit in situations where hearing must not be impaired, for example, while driving or cycling.

As the headphones are of open-air design, sounds go out through the headphones. Remember not to disturb those close to you.

## **About the in-ear headphones**

The earbuds seal your ears. Therefore, be aware that there is a risk of damage to your ears or eardrums if strong pressure is applied to the earbuds, or the earbuds are suddenly removed from your ears. After use, be sure to take the earbuds off your ears gently.

## **For the latest information**

If you have any questions or issues with this product, or would like to know more about this product, please visit [www.agptek.com](http://www.agptek.com).

Specifications

Screen	0.96 inch display
Size	70*28*16.5mm      net weight: 21g
Capacity	16 GB(expandable up to 128GB)
Music formats	MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC /ACELP
Record formats	MP3(32      64      128      192 kbps) WAV(512    768    1024    1536 kbps)
Charging time	2 hours
Battery capacity	3.7V/ 190mAh
Micro-USB transfer	5V 500mA wall charger (USB 2.0)
Distortion	< ±5%
Earphone output	(L)15mW+( R)15mW
SNR	85dB
Working Temperature	32-113°F

If you have any more questions, please feel free to contact [support@agptek.com](mailto:support@agptek.com).