 


RP21 Digital Voice Recorder User Manual

- Recording
- Music player
- USB 2.0 high-speed data transfer

Parts and Controls

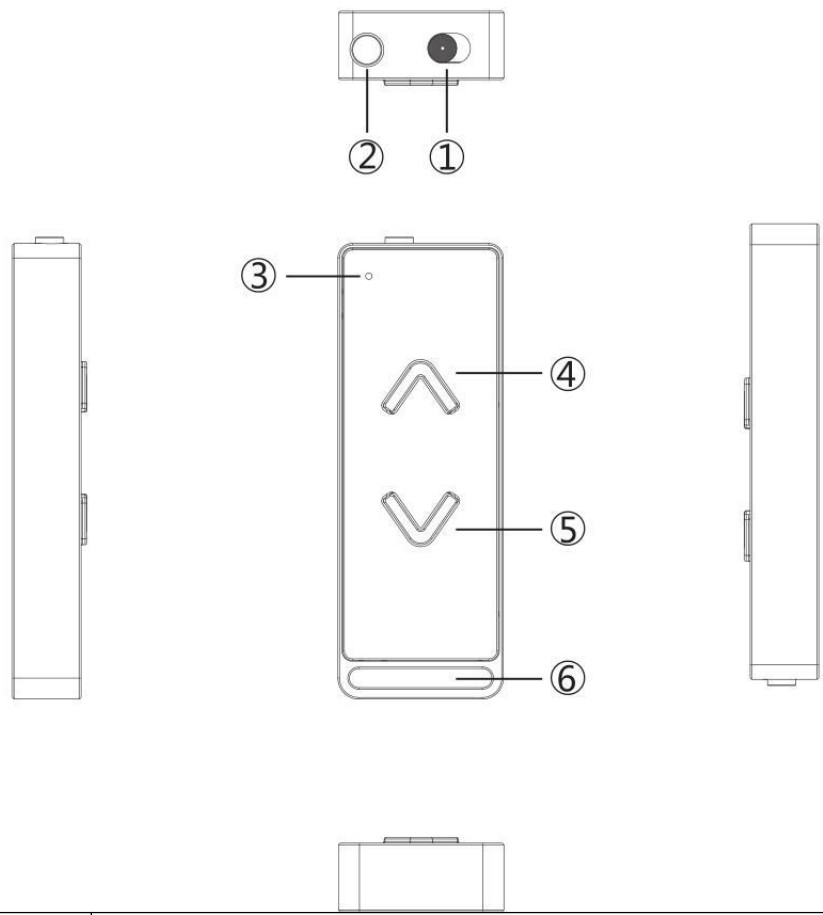

1. On/Off	Switch on/Off
-----------	---------------

2. Earphone/ USB port	3.5mm USB port
3. Indicator light	Indicate the status
4. Next/volume +	Click to go to next song; hold to increase the volume.
5. Previous /volume -	Click to go to last song; hold to decrease the volume.
6. Wire hole	A hole for wire or detachable clip

Power on/off

Slide the power button to ON/OFF to turn on/off the recorder.

Charge the recorder

Use 5V/500mAh charger for charging.

Note: While recording or playing the music, the red light of the recorder will flash quickly and light off after 10 seconds if the power is low.

Light Indicator

Charging	Red light flashing slowly
Charged	Red light stays on
Low battery	Red light flashing quickly and light off after 10 seconds.
Power on	Red light flashing rapidly for several times.
Playing	Red light flashing slowly and regularly.

Volume Adjustment

Hold the button </> to decrease/increase the volume while the red light will flash quickly. When reaching the maximum or minimum volume, the red light stays on.

Previous/Next

When the music is playing, click </> to go to previous/next song or audio file.

Recording

The recorder will start recording when the earphone is unplugged into the recorder after powered on. The red light will flash quickly for 3 times while switching to recording mode. The red light stays off when the recorder starts recording.

Play Music or Recordings

After powered on, the recorder will play the music/recording if the earphone is plugged in. While playing music or recordings, double click the </> button to choose playing song or recording, the red light will be on for 3 seconds during switching.

If the earphone is pulled out when playing music/recording, the recorder will go into standby mode with red light stays on, you can start recording or playing music by the following two ways:

- 1) Click the button </> to start recording. Slide to OFF(Power off) to save the recording. Power on to play the recording with earphone plugged in.
- 2) Insert the earphone again and click button </> to resume playing the song/recordings. Double click the </> button to choose playing song or recording.

Help and Troubleshooting

- Can't turn the recorder on

Please check whether the battery has been run out, try to connect the recorder with a computer and try again after charging.

Can't hear any sound from the recorder

- Please check if the volume is set to 0;
- Please check if the earphone is in poor contact with the recorder.

- Heavy noise when playing music

- Please make sure the plug is clean or this may cause noises;
- Please check if the music file is damaged. Try to play other musics to confirm. Damaged files may lead to heavy noise or skipping.

Specifications

Size	57*21*10mm		
Net weight	25.5g		
Flash memory	8GB		
Music Format	MP3	MP1	Bite rate: 32kbps~448kbps, sampling rate: 8KHz~48KHz
		MP2	Bite rate: 8kbps~384kbps, sampling rate: 8KHz~48KHz
		MP3	Bite rate: 8kbps~320kbps, sampling rate: 8KHz~48KHz
	WAV	INA-ADPCM	Bite rate: 32kbps~384kbps, sampling rate: 8KHz~48KHz
		NS-ADPCM	Bite rate: 32kbps~384kbps, sampling rate: 8KHz~48KHz
		PCM	Bite rate:128kbps~1536kbps,sampling rate: 8KHz~48KHz
	WMA	Bite rate: 5kbps~384kbps, sampling rate: 8KHz~48KHz	
	OGG	Bite rate:(Q0~Q10)20kbps~499kbps, sampling rate:8KHz~48KHz.	

	APE	Bite rate: Fast/Normal compressed,800kbps~1000kbps, sampling rate:8KHz~48KHz.
	FLAC	Bite rate: L0~L8, 1000kbps~1200kbps, sampling rate: 8KHz~48KHz.
	AAC-LC	Bite rate: 8kbps~320kbps, sampling rate: 8KHz~48KHz.
	ACELP	Bite rate: 5kbps~64kbps, sampling rate: 8KHz~16KHz.
Battery Capacity	140mAh lithium battery	
Playing Time	7 -10 hours	
Recording Time	10 hours	
Charging time	About 1.5 hours	