


G05S USER MANUAL

Unit overview

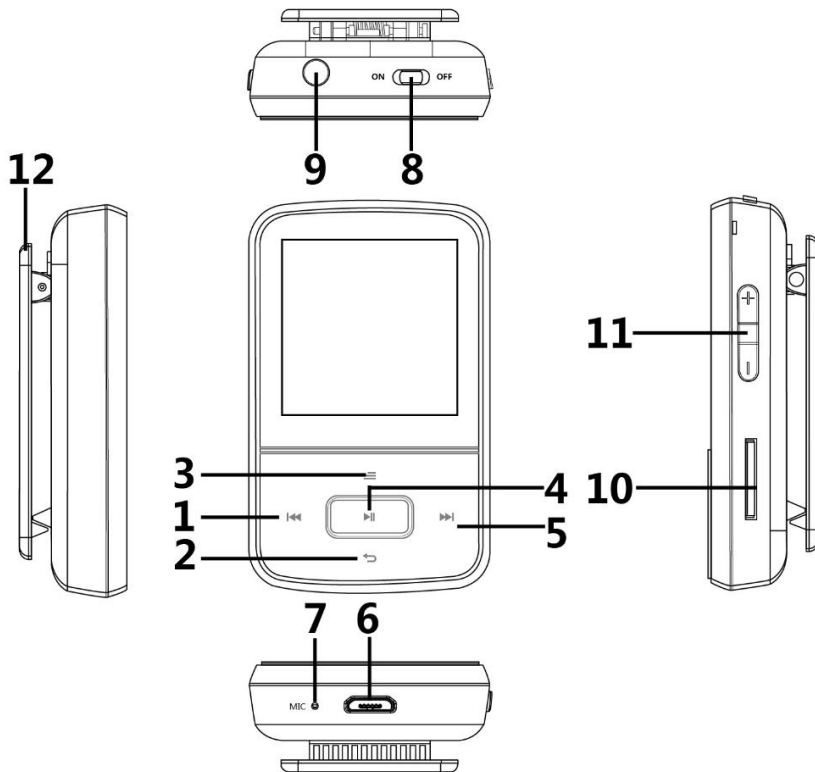

1. Previous song/Fast backward/ Return
2. Return / Scroll down
3. Submenu button / Lock /Unlock / Scroll up
4. Play / Pause / Enter / Power On-off
5. Next song/Fast forward
6. Micro-USB port
7. MIC hole
8. Power on-off
9. Earphone jack
10. Micro SD card slot
11. Vol+/Vol-
12. Clip
13. 1.5" TFT screen

Technical Specification

Screen	1.5 inch 128*128 TFT display
Flash memory	8GB
Audio format	MP3/WMA/OGG/APE/FLAC/WAV/AC-LC/ACELP
Recording format	FM/MIC record and WAV
Battery	Li-polymer rechargeable 300mAh
FM frequency	87.0-108MHZ
Micro-SD card	Extend to 64GB
Photo format	JPG,BMP and GIF
Charging time	3 hours

Basic Operation

Power On/Off

- Push on-off button to the “on” side or long press button ► for about 3 seconds to turn it on.
- Push on-off button to the “off” side or long press button ► for about 3 seconds to turn it off.

Scroll Up/Down

Click button ≡/ ↵ to scroll up/down one by one. Hold to scroll up/down quickly.

Return

- At any interface, long press ↵ to enter Main menu. **(not available for Bluetooth function)**
- At main menu, press ↵ back to the interface you just use (music or FM).

Lock the Screen

Long press \equiv to lock the screen. Repeat to unlock. When the screen is locked, all of the buttons on the key pad are not available.

Note: You can not lock the screen under music/submenu list interface.

Battery Charging

When there is a battery indicator on the screen, you must charge the device.

The device has two charge options:

- a) You can charge the device via the USB connector.
- b) You can also charge the device via a 5V 500mA USB wall adapter(not included)

Note:The charging time should not exceed 4 hours. It is recommended to turn off the device before charging.

Press buttons definition

Action	Basic operation
Short press	Press time is less than 1-2 seconds
Long press	Press time is more than 1-2 seconds
Hold	Keep pressing one button

Note:Without special instruction, all pressing mean short pressing in this user manual.

MUSIC

Play your music

On music menu, press \blacktriangleright to enter music function, and by pressing \equiv / \leftarrow to view sub-menu from up to down: "All songs", "Now playing", "Resume", "Artists", "Albums", "Genres", "Playlists" and "Create playlists". Press \blacktriangleright to confirm your option and start to play your music.

Please note: The submenu for music is different under

Bluetooth mode and normal mode.

- Repeat

Here appears 4 options, Repeat 1, and Repeat All, Repeat off, View Playing.

- Shuffle

Choose On or Off mode as you want.

- Equalizer

Here are 7 equalizers for your option, Off, Rock, Funk, Hip Hop, Jazz, Classical, Techno.

- Variable Speed Playback

Adjust the play speed from (the slowest)-8 to +8(the fastest).

- Repeat settings(only available when the music is playing)

Repeat mode(A-B):choose the option Replay mode, click ►► to confirm the starting time A (A is flashing).

Then click the ►► button to set the ending time B(B is flashing). Click the ►► button again to confirm. The icon for A-B indication will appear on playing screen. And the audio from time A to B will be repeated automatically.

Replay times: Set the replay times from 1 to 10.

Replay intervals: Set the replay interval for 1 to 10 (seconds).

- Bookmarks

It is marked by the stopping time as “hh:mm:ss”. So you can set the stopping time before you add it for continues playing next time conveniently.

You can add up to 10 bookmarks for each of the song. If there are more than 10 bookmarks, the old one bookmark will be replaced by the new.

You can find the bookmarks you saved with the option “Go to bookmark” under submenu “Bookmarks”, and you can delete them with the option “Delete bookmark”.

Note: Only when the song is playing, you can find all of the bookmarks you added for this song with the option “Go to bookmark” . That is to say, if you want to find the bookmark of one song, you must play the song at first and then find the option “Go to bookmark”. All of the bookmarks for this song will be listed under the option “Go to bookmark”.

- Add to playlist

There are 3 options prepared for you, including “Playlist on the go [1]”, “Playlist on the go [2]” and “Playlist on the go [3]”, you can add the song which is playing to any one of these three as you like.

- Remove from playlist

You can remove the song which is playing to any one of these three Playlist as you like.

- Delete

It will show” ...(song name)” delete? Press ► to choose yes to delete this song.

To create playlists by yourself

There is a free program called Media Go. It's the easiest program to use for transferring playlists to the AGPTek. Just create your playlists in Media Go and then right-click its name and select 'Add playlist to X :(Which is your MP3 player's disk) '. (You can download it at <http://mediago.sony.com/chs/download>).

SET

On setting menu and press ► to access the following settings: “Language”, “Date and time”, “Screensave mode”,

“play mode”, “sound settings”, “Brightness”, “Backlight timer”, “Sleep timer”, “Power off”, “Format device”, “Factory settings”, “Information”.

Press ► to default your setting.

Sleep timer: When it reaches the sleep time you set, the player will power off automatically;

Power off : When it reaches the power-off time you set, the player will shut off automatically when the MP3 is not playing and you have no action on it. Select Off to make it always on;

Backlight timer: Set the backlight time of your player;

Screensave mode: Choose “Screen off” to turn off the screensave mode, or choose the clock style to select from the 4 clock styles. You can press ◀ and ▶ to select it;

Language : Choose the language according to your need;

Information : See information about your player.

RECORD

On record menu and press ► to enter voice recording. The following lists will show: Start Voice Recording, Recordings library, Recording Format and Record Settings. Press ≡/↩ to select from these lists.

- Quick Record: scroll to “Start Voice Recording”, press ▶ to start your recording, click button ► to resume or stop recording, and press ↩ and choose YES to save the recording.

- In recording library view recording files(such as REC001.WAV, you can play it as music) and delete all files.

FM RADIO

On radio menu press ► to enter below radio playing interface.

You can press ◀/▶ to search programs manually.

At radio playing interface, press ≡ and will show a related lists including “Bluetooth link”, “Presets”, “Save to preset”, “Clear preset”, “Auto tune”, “Start FM recording” and “Tuner Region”.

● Listen to the Radio by Bluetooth

Find Bluetooth link, and click button ► to access to its submenu:

Bluetooth Status: choose to turn on/off the Bluetooth, turn on Bluetooth before searching the Bluetooth around.

Bluetooth Search: all of the Bluetooth searched will be listed, choose the device and click the button ► to connect/disconnect.

Bluetooth Device: all of the Bluetooth connected before will be listed.

● Presets

You can see both preset station and auto tune station. Press ►, you can see clear preset and clear all presets.

Clear preset: Press ► to enter the station list and press ≡ / ↶ to select the station, and then press ► to ensure. It will show etc: “Clear preset01?” press ► to confirm Yes or No.

Clear all presets: Press ► It will show “Clear all presets”. Press ► to confirm Yes or No.

Tip: if you use auto tune, all the station you had saved will be deleted.

● Save to preset

The frequency points of radio station are displayed with 30

frequency points reserved at most.

- Clear preset

Press ► to clear preset stations.

- Auto tune

Press ► to enter Auto tune mode, it will show “Do you want to auto-tune ”, press ► to confirm Yes or No. If choose Yes, it will be searching automatically and automatically save searched station in “Station list”.

- FM recording

Press ► to start recording, and press ↵ , it will show “Save recording?” press ► to confirm Yes or No. If choose Yes, it will saved recording content in the formats of FMREC001.WAV...

You will find saved FM recording in Record folder under FOLDER menu.

- Tuner region

The player is defaulted to command band, if you are in Japan, you need to change to Japan Band. If you are in Europe, you need to set to European band.

FOLDER

On folder view menu press ► to enter folder menu. Here you can check files you have stored on the device including music, recording and pictures.

When you play music under “Folder”, it will shuffle songs by folder if you turn shuffle on.

BLUETOOTH

Open the Bluetooth of the device you want to connect with the player. Then click ► to search the nearby devices, then

all of the devices which has opened its Bluetooth will be listed. Select the device you want to connect, then click ► to connect. After successfully connected, this player is ready to play music by Bluetooth earphones, Bluetooth speaker etc. Press ≡ button to enter its submenu:

Bluetooth Search, choose to restart searching;

Bluetooth Device, choose from the available devices and select to connect/disconnect;

Music list, choose to list all of the musics;

Music, choose to go to the music playing interface.

Note:

1. when playing music or FM radio by Bluetooth, it is not allowed to go back to the main interface unless disconnected with Bluetooth;

2. When the player is powered off by holding the middle button, it will connect to last device it connected by Bluetooth automatically once powered on next time;

3. If the player is connecting to external device by Bluetooth with card inserted, there will be options popped out for choosing internal memory or memory card.

If you have any questions about this player, please feel free to contact support@agptek.com.