

 


H2 Music Player  
***Hommie***

## Before use

Thank you for purchasing **Hommie** Music Player. Please read the manual carefully before using the product. Specifications are subject to change without prior notice.

## Buttons and Controls

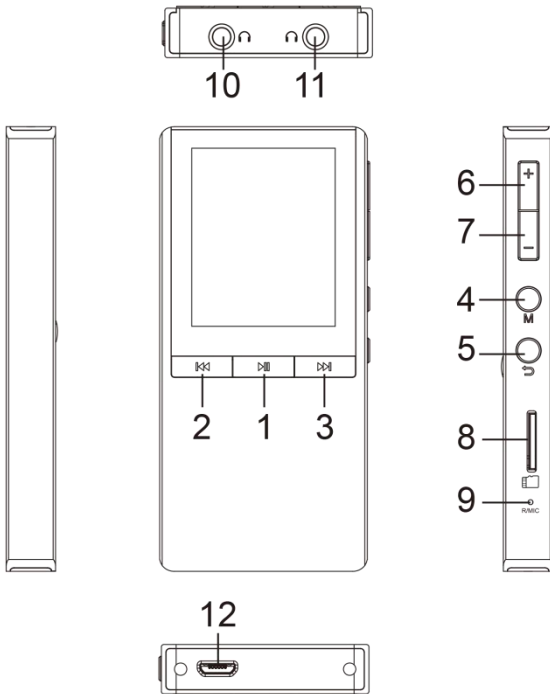

1. Power on/off; Enter; Play/Pause
2. Previous/Fast backward
3. Next/ Fast forward
4. Menu; Screen lock/Unlock
5. Back
6. Volume up
7. Volume down
8. Micro SD card slot
9. Mic/Reset hole
- 10/11. Headphone jack
12. USB interface

## Quick Guide

### 1. Charge the player

- Charge by computer


Connect the player to a running computer via USB cable.

The USB cable can both be used for data transfer and charging the player.

- Use **5V/500mA** charger(The charger is not included).

Plug one end of the micro USB cable into the USB port of a charger, the other end to the port on your device.

## 2. Power On/Off:

Long press the button  for 3 seconds to turn on/off the player.









Long press button  to lock/unlock the screen.

Note: Volume buttons are still available when screen is locked.

## 3. Home Menu:

The Home menu is the starting point of each application. There are 9 main functions on the home menu: Music/Bluetooth/FM radio/Recordings/Settings/ Folder View/Video/ EBook/ Tools.

## 4. Basic Operation:

- When it's on main interface ,press the button  /  to choose its 9 different functions on main interface, and press the button  to enter it.
- When it's on menu list interface, press button  /  to select items, press button  to confirm, press button  to go back.
- When it's on music/ video/ recording playing interface, hold down button  to go back to the Home menu directly

## 5. Import and Transfer Music


Connect the computer via the USB cable. Copy the music and other files you need to transfer in the computer, and then paste in the player, or just drag and drop the music files or folders directly when connected to computer.

**Note:** Do not disconnect your player during the transferring process. If you do, the file being transferred will be damaged.

## 6. Insert/Remove Micro SD Card

Insert the Micro SD card into its slot and push inward, the deck will automatically lock the Micro SD card. When remove the Micro SD card, push inward and then let go, the card will automatically pop up.

**Note:** Please insert the memory card while the player is off, or it may not able to read the data.

Find "Music" on Home menu and press the button  to access to its function.

The related list will show, including: All Songs, Last played, Artists, Albums, Genres, Directory listing, Playlists, Update playlist.




**Note:** "Directory listing" is only available when the Micro SD card is inserted.

- "Last played", take you back to the song or audio file you are playing now or played last time.


- "Playlist", there are 3 default playlist on the player: Playlist on the go [1]/[2]/[3].

- "Update Playlists", update music file.

### ● Listen to music

While it's on music playing interface, hold down the button  to fast forward, press to switch to next music file; hold down the button  to fast rewind, press to the previous song files. Press button  to play/pause. Press the side buttons +/- to adjust volumes.




### ● Submenu

While it's on music playing interface, press button  to access to the submenu. The related list will show:

- "Shuffle", choose to turn on/off shuffle mode.



- "Repeat", choose repeat mode: repeat 1, repeat all, and Preview or turn off repeat function. The player would only play the first 10 seconds of a track and then skip if you select option "Preview".


- "Equalizer", choose from the 7 sound effects, or choose "off" to turn off equalizer.





- "Variable speed playback", adjust playback speed from -8(Slowest) to +8(Fastest). Press button  /  to adjust the value and press button  to confirm.

- "Bookmarks", choose to add, delete or go to bookmark.



- "Repeat settings", A-B repeat settings:

- 1) Choose the option "Replay Mode", press button  to confirm the starting time A when A is flashing. Then press the  button to set the


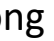


ending time B when B is flashing. The passage from time A to B will be repeated automatically. The icon for A-B indication will appear on the screen. Click button  again to back to normal playback.

- 2) Replay times: Set the replay times from 1 to 10. Press button  to adjust the value and press button  to confirm.
  - 3) Replay intervals: Set the replay interval from 1 to 10 (seconds). Press button  to adjust the value and press button  to confirm.
- "Delete", choose to delete the song that is playing now.
  - "Add to playlist"/"Remove from Playlist", choose to add to or remove from the 3 existing playlists.
  - "Play music from...", choose to play songs from all songs/artist/album/genre.

## FM Radio

Find "FM radio" on main menu with the button  to enter to its function. While it's on radio playing interface, press button  to access to its submenu which includes: Auto tune, Turner Region, Save to preset, Clear preset, Start FM radio recording, Station list(Preset stations), and FM Recording.

### ● Auto tune/Save to/Clear preset

- "Auto tune", search stations automatically. You can see the searched stations in "Station list". When the searching is done, choose from the searched list and press button  to enter the station, while is on radio playing interface, press  to switch among searched stations.
- "Save to preset", save the station you are listening to "Stations list".
- "Clear preset", press button  to enter the station list, choose the station you want to clear, then press  and choose "yes" to clear the station.


### ● Start FM radio recording

Choose "Start FM radio recording", press button  to pause/continue, press  and select "Yes" to save the recording file.


### ● FM recording

View the radio recording files. The radio recordings will also be saved in Recordings > Recordings library.

## ● Turn on/off radio background

Find “Radio on/off” in Settings<Home menu, press button  to enter its function. If you choose “Radio(off)”, the radio background will be off when you exit the radio playing interface. To turn radio background function please choose “Radio(on)”

## Bluetooth

Find “Bluetooth” on Home menu and press button  to access to its function.


### ● Bluetooth On/Off

Choose to enable or disable Bluetooth.

### ● Search for device

When the Bluetooth is enabled, choose “Search for device” to search the nearby devices, then all of the devices which has opened its Bluetooth will be listed.


### ● Device List



Choose from the available devices and select to connect/disconnect. Select the device you want to connect, and then press  to connect. After successfully connected, this player is ready to play music or FM radio by Bluetooth earphones, Bluetooth speaker, etc.



### **Note:**

1. Please open the Bluetooth of the device at first if you want to connect it with the player.
2. You can't record, watch videos or view pictures when Bluetooth is enabled.


## Recordings





Find “Recordings” on the Home menu, press button  to access to its function. The related list will show, including: Start voice recording, Recordings library, Set rec bitrate, Track AVR mode.

- Choose “Start Voice Recording” and press button  to start voice recording, press again to pause. Press the button  and choose “Yes” to save the recording file.

- Find the saved recordings in Recordings >Recordings library. Press button  to play the recording file. When it's on recording file playing interface, press button  and choose "Delete" to delete the file you are playing.
- Set rec bitrate: Set the recording format between MP3(32kbps)/WAV(1536kbps).
- Track AVR mode: When you start recording under AVR mode, the recorder will start recording automatically if sound is detected and stop recording when no sound detected.

## Video


Find "Video" on Home menu, press button  to access to its function. You will need to choose from local folder or card folder if the memory card is inserted.





- Press button  to watch videos, press  /  to go to previous/next video or hold down to fast backward/forward.
- When it's on video playing interface, press button  to access to its submenu, including: Brightness, Delete Video. Set according to your preference.

### **Note:**

This player can only support the .avi format in 128\*160, you should convert video files by format conversion software first.


## EBook








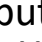


Find "EBook " on Home menu, press button  to access to its function.

- While it's on text playing interface, press button  /  to turn the pages. Click  to play automatically, click again to stop auto playing.
- While it's on text reading interface, press  to enter its submenu and set your preference, including Add bookmark, Bookmark select, Delete bookmark, Delete ebook, Auto playtime settings (set the automatic playing interval).


**Note:** The device can only recognize the article in "txt" format.




## Tools

Find "Tools" on the Home menu, press button  to access to its function. A related list will show "Calendar", "Stopwatch" and "Pictures".

- Select "Stopwatch" and press button  to enter, tap  again to start the timer, then press  again to stop or press  to resume. Press  to start a new one. Press  to go back. The maximum Stopwatch list is 5.
- Select "Pictures" and press button  to view pictures, press  /  to go to previous/next picture. When it's on picture viewing interface, press button  to access to its submenu, including: Brightness, Slideshow settings, Delete picture. Set according to your preference.

## Settings

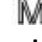Find "Settings" on main menu with the button  to enter to its function. A related list will show, including: Language, Date and time, Screensaver, Display settings, Radio on/off, Shutdown settings, Information, Format Device, Factory settings.

- Date and time: Choose "Date settings" to set date format and date. To set date, press button  to switch among month|day|year, press button  /  to adjust the value of month|day|year. Set time under "Time setting" and adjust the time in the same way.
- Display settings: Set Brightness, Backlight timer.
- Radio on/off: Choose to turn on/off radio background.
- Shutdown settings
  - Power off: When there is no operation on the device, the device will shut off automatically when reaches the set time;
  - Sleep timer: The device will shut down automatically when reaches the set time.
- Information: check player information and disk space about your player;
- Format device/Factory settings: Format the device or restore to factory settings.

**Note:** Before formatting the device, please backup the file so as not to lose any



files.

## Help and Troubleshooting

- **Can't turn on the player**
  - Please check whether the player is run out of power, connect the player to an adapter and try again after charging.
- **Can't charge the battery**
  - Disconnect the player, and then reconnect it.
  - Charge the battery under an proper temperature within the range of 5 °C (41 °F) to 35 °C (95 °F).
  - Turn on the computer.
- **Can't download files from computer**
  - Please confirm whether it's connected properly;
  - Please check whether the storage space of the internal memory is full;
  - Please check whether the USB cable is damaged.
- **Can't recognize the player when connected to the computer via USB cable.**
  - Disconnect the player, wait for a few minutes, and then reconnect it.
  - Disconnect the player, restart the computer, and then reconnect the player.
  - Connect your player to another USB port on your computer.
  - If the player has not been used for a long period of time, charge the player for about 10 minutes, after which it should start operating normally again.

## Specifications

|                   |                      |
|-------------------|----------------------|
| Screen            | 1.8 inch TFT display |
| Housing Material  | Aluminum             |
| Unit Size         | 90mm*42mm*10mm       |
| Net Weight        | 48g                  |
| Bluetooth Version | 4.0                  |

|                   |  |
|-------------------|--|
| Audio Format      | MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/ACELP                    |
| Video Format      | AVI/AMV(128*160)   |
| Pictures Format   | JPG/BMP/ GIF   |
| Ebook Format      | TXT  |
| Recording Format  | MP3: 32 kbps/64 kbps/128 kbps                            |
|                   | WAV: 512kbps/768kbps/1024kbps/1536kbps                   |
| Interface Type    | USB 2.0  |
| Internal Memory   | 8GB  |
| SD Card Expansion | Up to 128GB  |
| Battery           | 420mAh Li-polymer rechargeable                           |
| Charging Time     | 3 hours (5V/500mA)                                       |
| OS                | Windows98/ ME/ 2K/ XP/ SP2/ Vista/ Linux6.2/ Mac os 10.3 |

If you have any problems about this product, please feel free to contact [hommiehk@hotmail.com](mailto:hommiehk@hotmail.com).