 


Buttons and controls

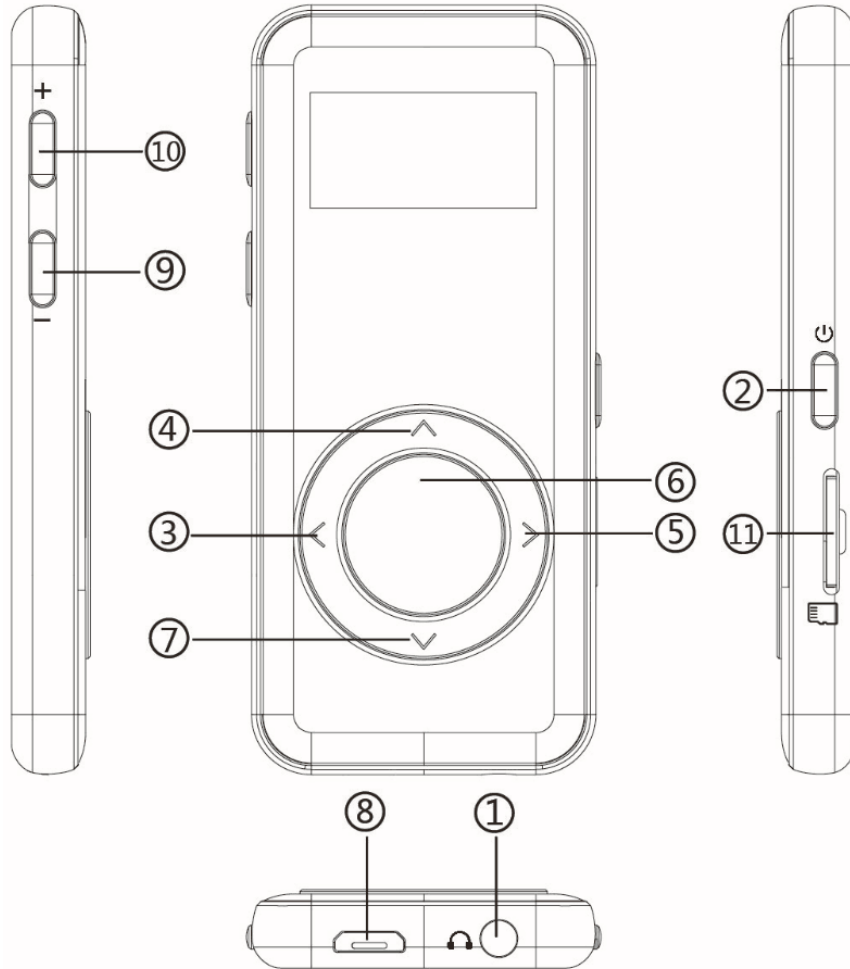

1. Earphone jack
2. Power button/Screen on/off
3. Previous/Fast backward button
4. Menu button/Move up
5. Next/Fast forward button
6. Play/Pause/Selection button; Middle button
7. Move down/Return
8. USB port
9. Volume -
10. Volume +
11. Card slot

Charge the Player

Use 5V/500mAh charger for charging.

Plug one end of the micro USB cable into the USB port of a computer, the other end to the port on your device. While it is fully charged, disconnect the cable from your device by pulling it straight outward.

Power On/Off

Hold the power button on the right side for 3 seconds to switch on/off the player.

Lock Screen

Hold button  to lock the screen. Repeat to unlock.

Easy Mode

While it is in music playing interface, hold button  and the middle button simultaneously to access to easy mode. Repeat to cancel easy mode.

When it is in easy mode, the player can only allows to increase/decrease the volume with button /, play/pause, go to previous or next song, rewind/fast forward.

Volume Adjustment

Click volume button +/- to increase/decrease the volume.

Return

Always click button < to go back(unavailable while it is playing/recording interface).

When it is in music/radio playing interface, click button ∨ and then < to return.

Main interface

Each time you press the button < / > , it will bring you to one of its 7 different functions, including **Music, Recordings, FM radio, Ebook, Folder View, Set, Now playing(Last played).**

Music

When there is a 🎵 icon in the main interface, click the middle button to access to its function. The related list will show, including: **All songs, Now playing(Last played), Artists, Albums, Genres, Playlists.** Choose from the menu, and click the middle button to play the music. Click button < to return.

Rewind/Forward

While it' s on music playing interface, hold the button > to fast forward, short press to next music file; hold the button < to rewind, short press to the previous song files. Click the middle button to play/pause.

Submenu

While it' s on music playing interface, click button ^ to access to the submenu.

The related list will show, including "Home" , "Shuffle" , "Repeat" "Equalizer" , "Variable Speed Playback" , "Repeat settings" , "Bookmarks" ,, "Delete" , "Add to playlist" , "Remove from playlist" and "Play music from..." .


1. Shuffle

Choose to turn on/off shuffle.


2. Repeat

There will be 4 options, including Repeat off, Repeat all, Repeat 1, View playing.

3. Equalizer

Click button  > "Equalizer" > " Off" , "Rock" , "Funk" , " Hip hop" , "Jazz" , "Classical" , "Techno" , "Custom" .

4. Variable Speed Playback

Click button  > "Variable Speed Playback" to adjust speed from -8(Slowest) to +8(Fastest). Set the playing speed as you need.

5. Repeat settings(only available when the music is playing)

Repeat mode(A-B):choose the option Replay mode, click button > to confirm the starting time A when A is flashing.


Then click the > button to set the ending time B when B is flashing. The audio from

time A to B will be repeated automatically. The icon for A-B indication will appear on the screen.


Replay times: Set the replay times from 1 to 10.


Replay intervals: Set the replay interval for 1 to 10 (seconds).


4. Bookmarks

Click button  > "Bookmarks" > "Add bookmark" / "Go to bookmark" / "Delete bookmark" . Select according to your need.

Recordings

When there is a  icon in the main interface, click the middle button to access to its function. The related list will show, including: Start voice recording, Recordings library, Record format, set rec bitrate, Record sensitivity.

- Click the middle button to start voice recording, click again to pause/resume.
- Click the  button and choose yes to save the recording.
- Find the saved recordings in Recordings > Recordings library.

Click the button  to select from all the recording files you have saved.

Then click the middle button to play the recording files you just saved.

Record format: MP3/PCM Rec


Record sensitivity: Choose the sensitivity level(0-7).

FM radio

Find  on main screen with the middle button to access to its function.

Insert the earphone, then select FM frequency from 87.5 to 108.0MHz.

While in the FM radio interface, press button  to enter the submenu: Home, Start FM radio recording, Presets, Save to preset, Clear preset, Manual tune, Auto tune, Tuner region, FM recording.

Tune to the radio station you want. Choose **Start FM radio recording** to start recording the radio. Click the middle button to pause/resume. Click  and choose yes to save the recording and it will back to the FM radio interface automatically.

Find the radio recordings in FM radio > FM recording.

Note: The radio recordings will also be saved in Recording > Recordings library.


Folder View

Find  on main screen with the middle button to access to its function.

Click button  to choose from the different folders/files. Click button  to delete. Click the middle button to play/view.

Note: Always put the lyric file and the music file in the same folder.

Set

When there is a  icon in the main interface, click the middle button to access to its function. The related list will show, including: Language, Brightness, Backlight timer, Date and time, Power saving, Sleep mode, Screensaver, Format device, Factory settings, Information.

Note: when you set "date and time", choose to set date or time, use button </> to switch to next one, increase or decrease with button ^/v, press the middle button to save.

Help and Troubleshooting

- Can' t turn on the player
 - Please check whether the player is run out of battery, connect the player to a adapter and try again after charging.
- Can' t hear any sound from the player
 - Please check if the volume is set to 0;
 - Please check if the earphone is in poor contact with the player.
- Heavy noise when playing music

- Please make sure the plug is clean or this may cause noises;
- Please check if the music file is damaged. Try to play other musics to confirm. Damaged files may lead to heavy noise or skipping.
- Can' t download file from computer
- Please confirm whether it' s connected properly;
- Please check whether the storage space of the internal memory is full;
- Please check whether the USB cable is damaged.

Specifications

| | |
|-------------------|---|
| Music formats | MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/ACELP |
| Recording formats | MP3, PCM |
| Screen | 0.96 inch 128*64 OLED display |
| Size | 76*34*7.4mm net weight : 42g |
| Capacity | 8 GB; support up to 64 GB micro SD card(SD card not included) |
| Recording time | 32 hours |

| | |
|--------------------|--|
| Playing time | 32 hours by earphone(volume set at 15) after fully-charged |
| Charging time | 2 hours |
| Battery capacity | Li-polymer rechargeable 220mAh |
| Recording distance | 10meters |
| Lyric format | LRC |

If you have any problems about this product, please feel free to contact support@agptek.com.