

FM/AM/SW1-2 BAND DSP RADIO WITH MP3 MUSIC PLAYER

R09

Features:

FM/AM/SW1-2 BAND DSP RADIO
MP3 MUSIC PLAYER
LED FLASHLIGHT
LI-ION BATTERY (BL-5C)
EARPHONE JACK 3.5MM
DC 5V INPUT CHARGE
USB/TF CARD SLOT

Lithium battery:

1. First random distribution of the lithium battery compartment as shown by positive and negative polarity properly loaded in the lithium battery compartment and closes the battery door. Turn the power switch.
2. **Use the Process, when the sound becomes significantly smaller**, lithium batteries should be charged immediately.
3. Charging Method
 - a. The machine can BL-5C lithium battery for charging. Users in the market to buy the battery needs to ensure that the purchase is a double protection of the battery (charge / discharge bidirectional protection), in order to ensure safe use.
 - b. insert random dispensed charging cord into the use (DC 5V IN) connector and the other end into the computer use port or a phone charger with use interface, this time, you can charge (charging light lit)
 - c. To shorten the charging time, **the device should be at power-off**. Each charge time is about 4 to 6 hours full. To ensure safely, each charge time is not more than eight hours.

Note: This machine charging voltage of 5V/500mA, **Please charge the Radio by standard 5V** and greater than 5v may damage the machine and cause security problems.

Radio usage

1. Turn on the device and move the switch to "RADIO"
2. Move the band switch to desired band and adjust the volume appropriately. Rotate the channel button to select a radio channel, when the signal of the channel is high enough
3. When listening to FM or SW radio, pull out the antenna and turn to get the optimized radio effect. When listening to AM or MW radio, rotate the device to get the optimized radio effect.
4. If the FM or SW radio signal is weak, please pull the antenna out of the window to an open area to improve the FM or SW receiving effect.

MP3 player usage

1. Turn on the switch to "MP3"; and the MP3 display is lit; insert a USB flash driver or TF card stored with audio files into the corresponding slot to enter MP3 playing state.
2. In MP3 playing state, press the "▶||" key to enter the pause state, and press the key again to resume playing.
3. Press the "◀◀" key to select previous track, or press the "▶▶" key to select next track. Press and hold the keys to reverse or forward fast respectively
4. In MP3 playing state, press and hold "▶||" (for at least two seconds), which indicates single repeat mode, and the current track will be repeated. Press and hold the key again, which indicates the mode of repeat all.