


S12 Waterproof Music Player

User Manual

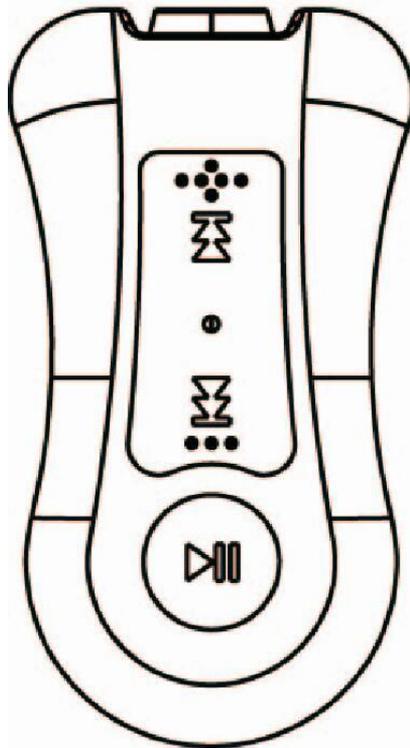


Thank your for purchasing S12 MUSIC PLAYER! Our after-sales is always at your service. If you have any problems about this product, please feel free to contact support@agptek.com.

Caution!!

1. Don't immerse it in the water for more than 1 hour.
2. To avoid corrosion and rust, please simply wash it in the clean water after swimming.
3. Please make sure it is **TOTALLY DRY** before charging. Although S12 is waterproof, any wet or moisture inside the player will cause serious damage during the charging.

Buttons and Controls

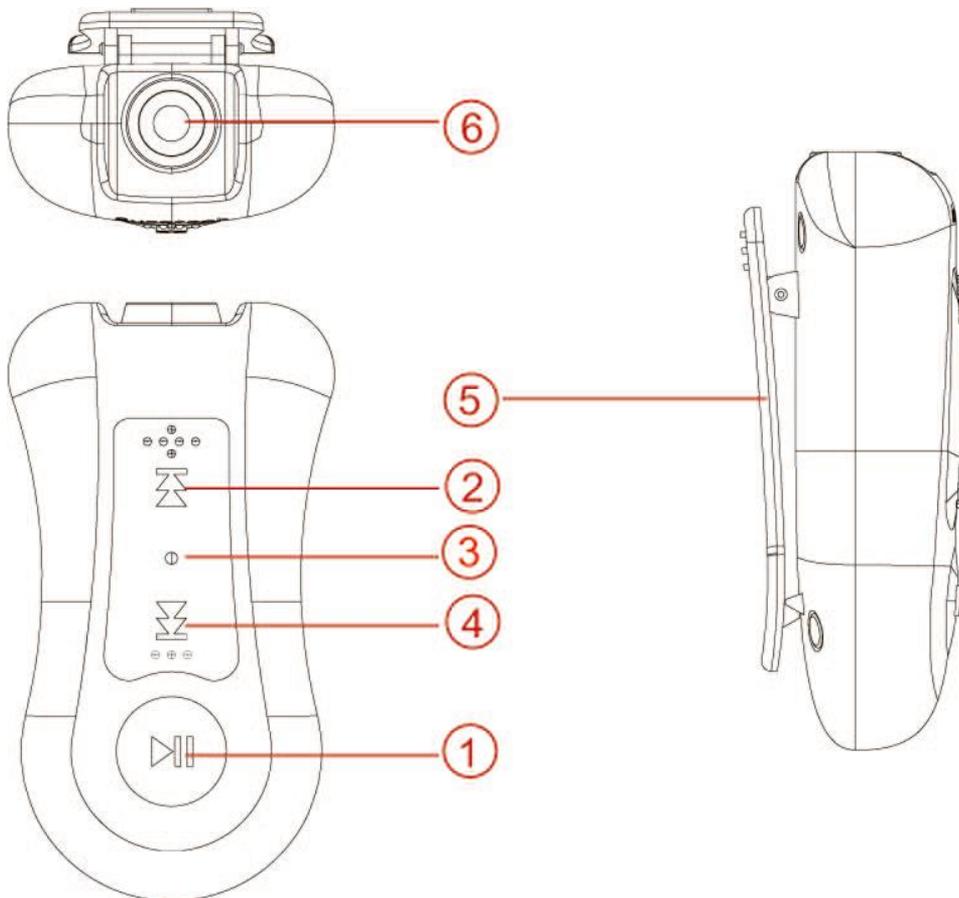

① **Play/Pause/On/Off/Reset**

- 1) Play/Pause: click to play or pause;
- 2) Power on: hold the play button until the red and blue light turns on simultaneously, and the music will play automatically;
- 3) Power off: hold the play button until the red flashing light is off;
- 4) Reset: hold the button for 10 seconds.

② **Next Track/Volume+**

- 1) Next Track: click to go to the next song;
- 2) Volume+: hold to increase the volume.

③ **Light indicator**

The indicator shows the LED light status.

④ **Previous Track/Volume-**

- 1) Next Track: click to go to the previous song;
- 2) Volume+: hold to decrease the volume.

⑤ **The sports clip**

Easily clip on your clothes, especially for sports.

⑥ **Earphone/USB jack (2-in-1)**

Charge by the USB cable; plug in headphones to listen to music.

Shuffle mode(Button ②&④)

Hold the previous and next button for about 3 seconds simultaneously to turn on/off shuffle mode.

LED status in different situations:

Note:The indicator will look like pink when the blue and red LED light flash simultaneously.

Status	Blue indicator	Red indicator	Definition
No Files	Off	Flashing slowly	Red light flashes for 5 times slowly and turn off automatically.
Normal Mode	Flashing slowly	Off	When the music is under normal mode(play by sequence), the LED flashes blue slowly.
Shuffle Mode	Flashing quickly	Off	when the music is under shuffle mode, the LED flashes blue quickly.
Paused	Off	Stay red	The LED stays red and automatically turn off after 5 minutes.
Low Battery	Stay blue	Flashes rapidly	The LED stays blue and red light flashes quickly with warning sound for every 2 minutes until powered off.
Charging	Flashing quickly	Flashing quickly	The LED flashes blue and red simultaneously during charging.
Charged	Stay blue	Stay red	The LED stays blue and red simultaneously when the player is fully charged.

Files transfer

Connect it to the computer by the USB cable, the mp3 player will show up as a removable disk as soon as the computer recognize it and then just drag files onto the mp3 player.

Note: If your computer cannot recognize the player, the USB cable may has some problem, please use another USB cable to connect it to your PC.

Charging the player

Charge the player by the attached USB cable, plug it into the earphone jack and charge for about 1.5 hour until both the red and blue light stays on.

Help and Troubleshooting

- Can't turn on the player
 - Please check whether the player is run out of battery, connect the player to a adapter and try again after charging.

(When you connect the player to a computer, both the red and blue lights turn on, then stays blue, and then red and blue lights stay on if computer recognizes player).

- Can't hear any sound from the player
 - Please check if the volume is set to 0;
 - Please check if the earphone is in poor contact with the player.
 - Please check if the music format is supported;

- Heavy noise when playing music;
 - Please make sure the plug is clean and DRY or this may cause noises;
 - Please check if the music file is damaged. Try to play other musics to confirm. Damaged files may lead to heavy noise or skipping.
- Can't download file from computer
 - Please confirm whether it's connected properly;
 - Please check whether the storage space of the internal memory is full;
 - Please check whether the USB cable is damaged.
- The indicator is on, but the buttons do not work
 - Turn off player (Hold the Play/Pause button for 3 seconds).
 - Press and hold the Play/Pause button for 10 seconds to reset the controls (LED will flash RED and BLUE at the same time and then turn off).

Music Format Supported

Music Format	Bit rate	Sampling Rate
MP3	8Kbps—320Kbps	8KHz—48KHz
WMA	5Kbps—384Kbps	8KHz—48KHz
WAV	32Kbps—384Kbps	8KHz—48KHz