 


**USER MANUAL**  
**AGPTEK**

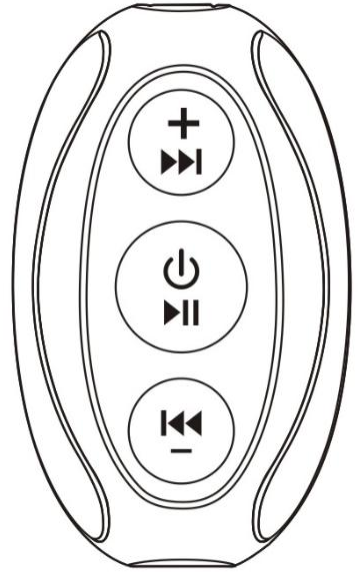

**S66B Waterproof**  
**Music Player**


For detailed user manual, please visit:  
<http://www.agptek.com/support/download.html>

## Safety Warnings

 - Before using this product, read and follow all warnings and instructions.
- This product is not intended for use by children under 10-year-old. Young children should be properly supervised.
- This product is intended for household use only and not for commercial or industrial use.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Ventilation should not be impeded by covering ventilation openings with items such as newspapers, table cloths, curtains and the like.
- Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.

## Brief View of Player

### A. Outlook and Controls

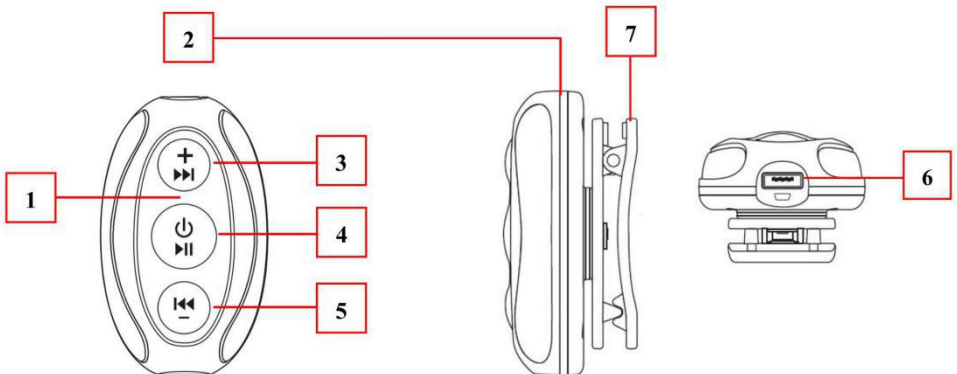

1. **Status LED:** For charge / play status
2. **3.5mm Jack:** For Earphone connection
3. **+ /▶▶ button:** To increase volume or play next song
4. **⏻ /▶|| button:** To On / Off, Play / Pause, Shuffle, Reset
5. **- /◀◀ button:** To decrease volume or play previous song
6. **Micro USB Port:** For charge / PC connection
7. **Rotatable Clip**

## **B. About the provided water resistant in-ear earphone set**

### **Precautions:**

1. The earbuds seal your ears. Therefore, be aware that there is a risk of damage to your ears or eardrums if strong pressure is applied to the earbuds or the earbuds are suddenly removed from your ears.
2. After use, be sure to take the earbuds off your ears gently.
3. Sound may become muffled if water gets inside the earphone set.
4. If this happens, hold the earphones and pat it to remove the water.

## **C. About player' s battery**

S66B Player has an internal, non – user-replaceable rechargeable lithium battery. For best results, the first time you use the player, let it charging for about 1 ~ 2 hours or until the charging “**Status LED (1)**” long light from blinking before you use it.

### **1 Charging the Battery:**

- 1.1 You can charge the Player' s battery in two ways;
- 1.2 Connect player to your computer. Or;
- 1.3 Use the 5V 500mA USB power charger. (*not included*)

## 2 To Charge battery

- 2.1 Plug the 3.5mm jack plug of USB cable to the Player multi-function earphone jack;
- 2.2 The “**Status LED (1)**” will light blinking, for every second, it is in charging.
- 2.3 The “**Status LED (1)**” will long light when the battery is fully charged.
- 2.4 Disconnect the USB cable when it is done.

## D. Getting start player

### 1 Turn On / Off

- 1.1 Plug-in the earphone set into Player’ s “**3.5mm jack (2)**” .
- 1.2 Press and hold the “**⏻/▶ (4)**” button for 2 seconds, the “**Status LED (1)**” will light On, the player is turning On and music will play in seconds automatically.
- 1.3 To turn Off, press and hold the “**⏻/▶ (4)**” button for 2 seconds, “**Status LED (1)**” will light Off.

### 2 Play / Pause Music

- 2.1 Press the “**⏻/▶ (4)**” button to pause the playing music,
- 2.2 Press the “**⏻/▶ (4)**” button again to resume.
- 2.3 If player is in pause state for 3 minutes, it will be turned to Off automatically.
- 2.4 When press the “**⏻/▶ (4)**” button, if no music files are stored in player’ s memory, the status LED blinking fast for few seconds and the player will turn to Off automatically.

### 3 Adjust Volume

- 3.1 Press and hold the “+ /▶▶(3)” button to increase volume level.
- 3.2 Press and hold the “- /◀◀(5)” button to decrease volume level.
- 3.3 For hearing protection; a beep signal warning will be heard from earphone every time you increase the volume level and reach to the default setting level, which may exceed 85dB. Press the “⏻▶▶ (4)” button to accept the warning then press and hold the “+ /▶▶ (3)” button again to increase the level until to maximum level.

#### 4 Play Next / Previous Music

- 4.1 Press the “+ /▶▶ (3)” button to select next music.
- 4.2 Press the “- /◀◀(5)” button to select previous music.



#### 5 Shuffle

- 5.1 During playback, quick press the “⏻▶▶ (4)” twice to activate the shuffle and the light will blink every 3 seconds.
- 5.2 Quick Press the “⏻▶▶ (4)” twice again to deactivate the shuffle and the light will blink every second.

#### E. Indicator light function

- **Playing Mode:** Blue light flashing once per second.
- **Pause Mode:** Blue light will long light.
- **PC Connecting Mode:** Red light blinking. (Charging in background)
- **Recharging Mode:** Red light blinking.
- **Recharge complete:** Red light will long light.
- **Low Battery:** Red light blinking.

## **F. Reset the device**

1. In some circumstances the device ' s function may hanging and need to reset. To reset the device;
2. To reset the device, press and hold the “  /▶ (4) ” button for 8 ~ 10 seconds, the player should turn off from hanging.
3. After reset, press and hold the “  /▶ (4) ” button to restart the Player.

## **G. For Swimming**

1. Make sure that you use only the provided water resistant in-ear earphone set for swimming;
2. Choose the best fitting earbuds. There are different type and size earbuds supplied inside the box;
3. You need to use seal earbuds on left and right earphones and gently wear them in your ears;
4. When fitted correctly, you should be able to notice while the player is not playing music that surrounding sounds will be significantly muted.
5. Now plug the 3.5mm jack plug of earphone set into Player earphone output for connection. Make sure it fit the Player firmly.
6. The earbuds seal your ears. Therefore, be aware that there is a risk of damage to your ears or eardrums if strong pressure is applied to the earbuds or the earbuds are suddenly removed from your ears. Due to this risk, do not do vigorous exercise, dive into a swimming pool, etc., while wearing your Player.

## H. Not use and exposure to seawater

- S66B waterproof device, put you at ease, use in the rain or under the hose flush and swimming pool water, but please keep in mind that you' re not placing it exposed to seawater, salt water or liquids (such as drinks).
- Excessive or improper use of appliance may invalidate the maintenance.

## I. Troubleshooting

Play cannot turn ON	<ul style="list-style-type: none"><li>● Check whether battery have enough energy.</li></ul>
No sound is heard	<ul style="list-style-type: none"><li>● Check whether Volume is set to " minimum " and connect the earphone plugs firmly.</li><li>● Check whether the earphone plug is dirty.</li><li>● Corrupted WMA / MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted.</li><li>● Check whether music files format are support.</li></ul>
Download music files fail.	<ul style="list-style-type: none"><li>● Check whether player' s 3.5mm plug and/or USB plug is connected properly.</li><li>● Check whether driver is installed correctly.</li><li>● Check whether the player' s memory is in full.</li></ul>

## J. Specification

Dimension	55mm (H) x 33mm (W) x 26mm(D)	
Weight	21.5g (approximate)	
PC Connection	USB 2.0 (High Speed)	
Internal Memory	8G(No expandable memory)	
Power Source	DC Input: DC 5V 500mA	
Battery	115mAh Lithium-Polymer	
Supports Music Format	MP3	32kbps - 320kbps
	WMA	32kbps - 320kbps
Earphone Output	2mW x 2 channels (at 32 Ohm)	
Freq. Response	20Hz – 20,000Hz	
SNR	80dB	
Water Resistant	IPX8	3 meters, 30 minutes
Operation Temperature	0°C - 40°C	

If you have any questions about this product, please feel free to contact us at [support@agptek.com](mailto:support@agptek.com).