 


# AGPTEK Digital Music Player G02

## Quick Start Guide

### Buttons on the player

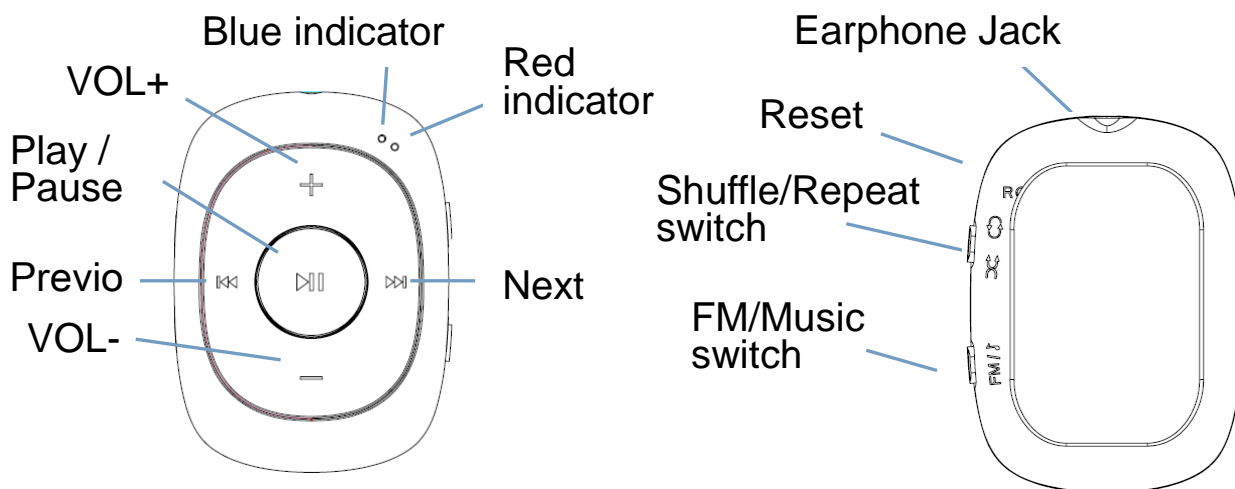

### Buttons at a glance

1. **VOL+**: Volume up button.

2. **Play**: Play / Pause / Power On-Off.

When under FM Radio mode, press to come to the next station.

3. **Previous**: short press to the last song; long press to rewind.

When under FM Radio mode, press for three seconds to start auto tune. (The LED stays blue when under auto search, the LED flashes blue when the auto tune finishes).

4. **VOL-**: Volume down button.

5. **Next**: short press to the next track; long press to fast forward.

When under FM Radio mode, press for three seconds to start auto tune. (The LED stays blue when under auto search, the LED flashes blue when the auto tune finishes).

7. **Shuffle / Repeat switch:** turn the switch to shuffle or repeat to change the play mode.

8. **FM / Music Switch:** turn the switch to FM or Music.

## MUSIC

### Download music

1. Plug the player to your PC with the enclosed USB lead. (**The LED stays blue and red at the same time when it is under charging, the player cannot play under charging**).
2. The player will display as a removable disk as soon as your PC recognize the player.
3. Then drop files onto the player and enjoy the music.
4. The player is compatible with Windows 98 / XP / SE / ME / 2K, MAC OS 10、 Linux 2.4.2 XP / VISTA \ WIN7.
5. Support music formats: MP3 / WMA / WAV.

### Play music

1. Push the center button to turn on the player. (The LED stays blue and red at the same time when it turns on then the LED flash blue)
2. Turn the switch to music.
3. Push the center button to pause or play the track.
4. Push the left or right double arrow keys to previous / next track.
5. Push the + / - buttons to adjust the volume.

## FM Radio

1. Push the center button to switch on the player. (The LED flashes blue when the player is switched on).
2. Turn the switch to FM and long press **Pre / Next** buttons to start auto tune. The searched stations will be saved automatically. The LED stays blue when the player is under auto tune. The LED flashes blue when the auto tune finishes.
3. Push the center button to the next station.

### LED status in different situations:

Status	Blue indicator	Red indicator	Definition
Turn on the player	On	On	The LED stays blue and red at the same time then only the LED flashes blue.
Turn off the player	flashes rapidly	Off	The LED flashes blue rapidly for three seconds and the player will be switched off
Music repeat mode / FM	Flashes	Off	When the player is under FM Radio and music repeat modes, the LED flashes blue.

Radio			
Music shuffle mode	Flashes	Flashes	When the player is under music shuffle mode, the LED flashes blue and red at the same time.
Pause the music	Stay blue	Off	The LED stays blue when the music stops
No files	Flashes rapidly	Off	When there are no files on the player, the LED flashes blue rapidly and then it will switch off automatically.
Charged for 60% or above	Stay blue	flashes	The LED stays blue and flashes red. It usually takes about 2 hours for being fully charged.
Under charging	On	On	The LED stays blue and red at the same time when the player is under charging.
Low power	Off	Flashes rapidly	When the power is low the LED flashes red rapidly.

If you have any question on this player, please contact with

[eva@agptek.com](mailto:eva@agptek.com).