 



**AGPTEK**  
*Voice Recorder*




## Quick Guide

 - Plug earphone into the jack on earphone jack of the device then slide the power switch up to turn on/off the player.
- Each time you tap the button ◀◀/▶▶, it will bring you to one of its 6 different functions, including Music, Recordings, FM Radio, EBook, Folder view, and Set.
- Tap the icon ▶|| to access to its function.

*Note: the player will power off automatically if inactive and no applications operate on backstage for 1 min; It will fall into screen saving mode within the set time and then power off automatically if inactive and no applications operate on backstage for 1 min.*

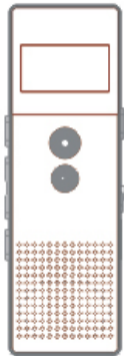

## Parts and Controls

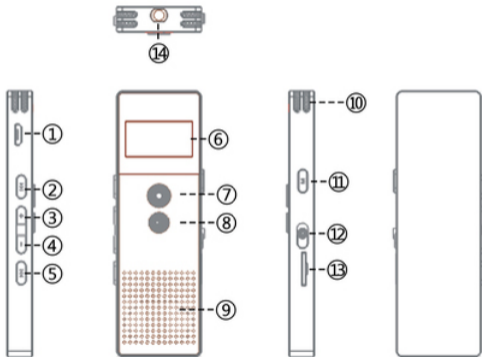 

1. Micro USB interface
2. Next button
3. Volume up
4. Volume down
5. Previous button
6. Display screen
7. Recording button
8. Enter button
9. Speaker
10. Microphone
11. M button
12. Switch button
13. SD card slot
14. 3.5 mm Earphone Jack

## **Power On/OFF**

Slide the switch button to on to power the device on.

- When the switch button is in on position, hold the enter button for about 3 seconds and then it will fall into sleep mode, hold it again to wake up the player.
- To turn off your player totally, please slider the switch button (Main Power) to off.
- If you can't turn on the player, please kindly note if the slider switch is in "ON" position.

## **Charge the Player**

Plug one end of the micro USB cable into the USB port of a computer, the other end to the port on your device. While it is fully charged, disconnect the cable from your device by pulling it straight outward.

*Note: when you start charging, it will show two options: “Charge & Transfer” and “Charge & Play”. An icon in the top right corner will show the charging status.*

## **Play Your Music**

While there is “Music” icon on main screen, tap the enter button ▶|| to access to its function. Then you can play your music files as “All songs”, “Artists”, and “Albums”.

- Volume adjust

Tap the +- button on left side of the player to adjust the volume, and then tap the enter button to ensure.

- Return

1. Return to the main screen: tap the M button on right side of the player continually to back to the main playing screen.
2. Return to the music playing screen: tap the enter button with icon “Now playing”

on main interface to access to now playing interface.

- Rewind/Forward

While it's on music playing interface, hold the button **▶▶** to fast forward, tap to next music file; hold the button **◀◀** to rewind, tap to the previous song file. Tap the enter button **▶||** for playing/pause.

- Submenu

While it's on music playing interface, hold the button "M" to access to the submenu. Then a related list will show, including "Play mode", "Sound settings", "Repeat settings" and "Delete".

1. Play mode

Hold the button M > "Play mode" > "Repeat"/"Shuffle". Select according to your need.

2. Sound settings




Hold the button M> "Sound settings" >"Equalizer"/ "Variable Speed Playing".

For equalizer, you can choose different music style, such as "Rock", "Funk" and etc.

For variable speed playing, you can set the playing speed as you need.

### 3. Repeat settings

Hold the button M> “Repeat settings” > “Replay Mode” to access to its function, and the icon for A-B indication will appear on playing screen.

- ① Starting time for replay is confirmed while tapping the icon  (B is flashing)
- ② Tap the icon  again and then it will start replaying (adjust the replay paragraph according to your need).
- ③ Tap the icon  again to back to normal playing.

Tap “Replay settings” > “Replay Times”, and then choose from 1 to 10 with tapping the button +/-.

Tap “Replay settings” > “Replay Interval”, then choose from 1 to 10 seconds with tapping the button +/-.

### 4. Delete

Delete the music files you need.

#### • Resume playing

1. While the music is still playing in the backstage, and then turn the slider switch button off, it will start playing from where you left the next time you turn it on.
2. While the music is still playing in the backstage, and it's on music playing

interface, hold the enter button for about 3 seconds to turn it off so it will play the music continually next time you turn it on.

- **Transfer Files to Your Player**

Connect your device to the computer with the enclosed Micro USB cable. The mp3 player will show up as a removable disk as soon as the computer recognize it and then just drag files into the mp3 player. If your computer cannot recognize the player, the enclosed Micro USB lead may has problem please use another Micro USB lead to connect it to your PC.

## **Recordings**

While there is “Recordings” icon on main screen, tap the enter button ▶|| to access to its function. Then a related list will show as “Recordings library”, “Noise switch”, “Record format”, “Set rec bitrate”, and “Record sensitivity”.

Note: while in any interface, tap the recording button to start recording, tap it again to save.



- Select a format from MP3, or PCM.
- Turn the noise switch on/off as you need



- Select a record bitrate among 512 kbps, 768 kbps, 1024 kbps and 1536 kbps.
- Set recording sensitivity, which means the higher grade you set, the louder sound it plays.
- Go to “Recordings Library” to play the recording files you saved.

## **FM Radio**

While there is “FM radio” icon on main screen, tap the enter button to access to the radio playing interface.

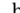
- Tap the enter button to choose among the preset stations.
- While on radio playing interface
  1. Tap the button  /  to adjust the station manually; hold it to adjust automatically and then tap it again to ensure it.
  2. Tap the M button to back to last grade.
- While on radio playing interface, hold the M button to access to its submenu, and then a related list will show on the screen.
  1. Save the now playing station to presets or clear the preset as you need. (There are 30 presets prepared for you.)

2. Select the region according to your need.


## E Book

 While there is “EBOOK” icon on main screen, tap the enter button to access to its function.

*Please note: Only “txt” format is supported for eBooks.*

- Tap the button  to turn page up and down.
- Tap the button M to access to its submenu. And then adjust according to your need.

*Please note: if you can't read your txt document through E book, connect your player to the computer, and then choose the file for the item “save as”, select the code as “UTF-8” and save. Copy the txt file to E-Book folder and it will back to normal condition for your reading.*

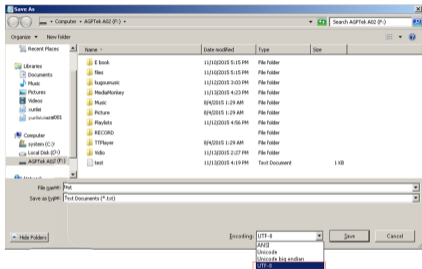



## Folder View

While there is “Folder View” icon on main screen, tap the enter button to access to its function. Select your files and play.

## Set

While there is “Folder View” icon on main screen, tap the enter button to access to its function.

- Set the sleep time and display settings according to your need. Tap the enter button to save.
- Set the “Date and Time” according to your need.

While in date/time setting interface, tap the button  /  to choose different items, and then tap the button +/- to adjust the value. Tap the enter button to save.

- Choose your language.
- Refer to the information of the device.
- Format the device or do factory setting according to your need.

## Specifications

Display screen	OLED 128*64
Recording formats	MP3: 32 kbps; 64 kbps; 128 kbps
	WAV: 512 kbps - 153 kbps (PCM format)
Music formats	MP3/WMA/WAV/APE/FLAC
Size	86mm*21mm*10mm
S/N	88 DB
Distortion	0.05%
USB interface	USB2.0 HIGH SPEED
Capacity	8 GB, support up to 32GB TF card (not included in the package)
Case	Zinc alloy
Charge time	2 hours
Battery capacity	3.7V; 260 mAh
Recording distance	10-15 meters
OS	Window98 or above